

LanScaper™ NT700

Network Tester

Quick Start Guide



Essentials of Network Testing

- Connect to any unknown jack or plug; press the CABLE Button (6).
- LanScaper™ will analyze voltage and link signal and display signal or device on line.
- If no signals are found, the one-ended cable test is done. This test reports shorts, split pairs, and length to opens
- Plug into the included remote for full cable 'map' test and length.
- Choose cable testing or active network testing with the push of a button (6).

Functions:

- Cable Testing** — Press the CABLE mode Button (6) to cycle through the following: Jack ID Test, Cable Test, Cable Length, Tone Generator
- Network Testing** — Press the NTRWK mode Button (6) to cycle through the following: Flash Link LED, Ping Test, Validate Link
- Use the SEL Button (5) to activate the desired test.
- Setup - Press Cable and Network together to enter setup mode: displays battery life, switch between meters and feet, active network test setup (DHCP on/off, PING targets, etc.)
- Backlight – quickly pressing the PWR Button (7) turns the backlight on/off

Features:

- Jack ID mode identifies port services like Ethernet, ISDN, POTS, Network speed, Phantom Power.
- Cable Test mode tests for opens, shorts, miswires, split pairs, and reversals. 8 ID remotes allow for network mapping
- Length Measurement in feet or meters using cable capacitance.
- Tone Generator uses digital smart tone, four tones on any individual or conductor pairs
- Flash Link LED, to locate a hub or router port
- Ping Test, retrieve IP address while conducting packet and latency tests
- Auto Off helps prolong battery life



Button Functions

- RJ45 Jack
- Link Indicator
- Back-lit LCD
- Cursor Buttons
- SEL Button
- Mode Button
- Power Button
- Battery Compartment (standard 9VDC battery)