

## QUICK CARD


### OTU-5000 Network Configuration

This document will show you how to view and edit the OTU-5000 network configuration.

#### MAKE PHYSICAL CONNECTION

Connect a USB to Ethernet adapter (see list below) and Ethernet cable between the OTU and laptop. Only the following USB to Ethernet adapters are verified to work:

Manufacturer	Model
TRIPP-LITE	U236-000-R
TRENDNet	TU3-ETG
D-Link	DUB-1312

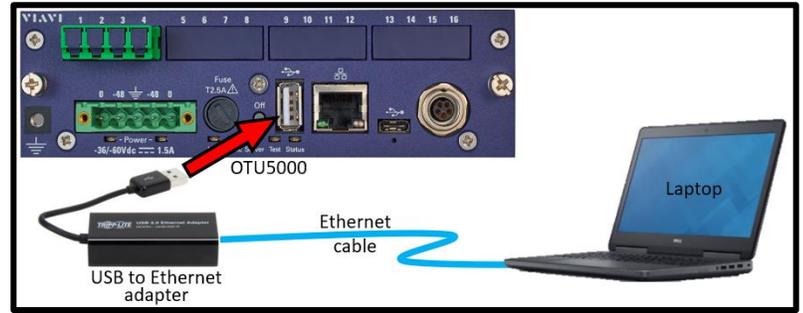

#### LOG IN / VIEW NETWORK CONFIGURATION

\*\*You will need to set your laptop Ethernet port to 192.168.1.x to connect to OTU. Using a web browser, go to 192.168.1.1 and hit Enter. Login screen will appear once connected.

1. Type in Login and Password information.
2. Tap **Connect** (Connect)




Once logged in you will be on the **Monitoring view**.

3. Tap  (Setup) icon



You are now in the **Setup view**.


4. In the **Network** (Network) section you can VIEW the network address settings.

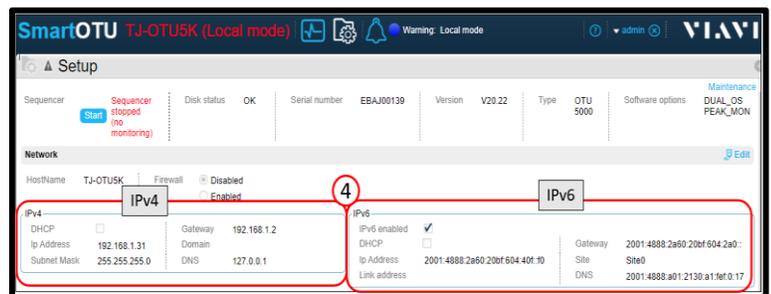


## QUICK CARD

### EDIT NETWORK CONFIGURATION

1. In the **Network** (Network) section, on right side, tap **Edit** (Edit).

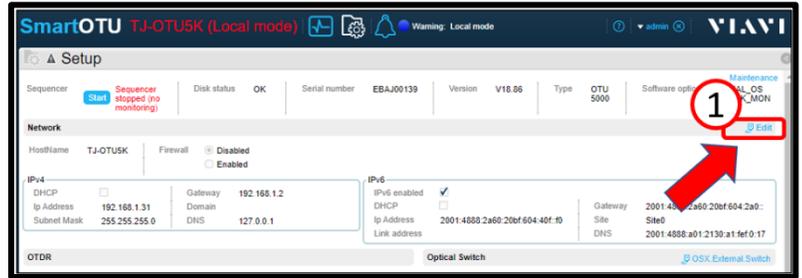

2. Enter network information in the appropriate section (IPv4 or IPv6).  
**\*\*NOTE\*\*** The Gateway and DNS addresses are very important and specific to IPv4 and IPv6. Please be sure these addresses are correct.

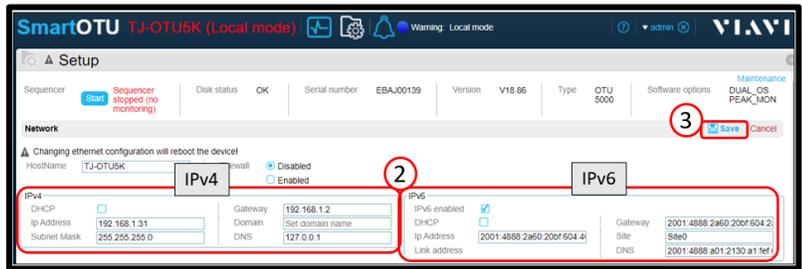

3. When finished, tap **Save** (Save) on right side of screen.

If you changed any network information a pop-up window will appear telling you that the unit needs to reboot.

4. Tap **Yes** (Yes) to save changes and reboot unit.



## QUICK CARD

### VERIFY NETWORK CONFIGURATION


The Login screen will appear once unit reboots.

1. Type in Login and Password information.
2. Tap **Connect** (Connect)



Once logged in you will be on the **Monitoring view**.

3. Tap  (Setup) icon

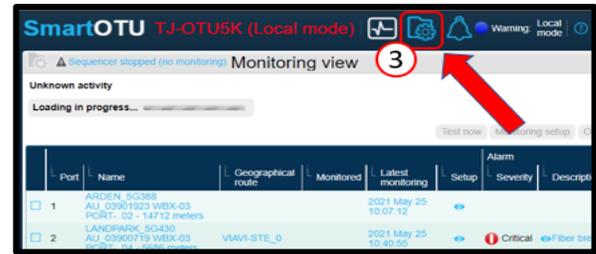

You are now in the **Setup view**.

4. In the **Network** (Network) section you can verify the network address settings

