

Quick Card

T-BERD[®]2000/SmartOTDR Modular Test Set Using an Android Mobile Hotspot for Connectivity


This procedure describes how to connect a T-BERD/MTS-2000 or SmartOTDR to an Android Mobile Device Hotspot via WiFi.

Equipment Requirements:

- T-BERD/MTS-2000 or SmartOTDR equipped with the following:
 - Software Release V16.22 or greater
 - Wireless option for Wi-Fi Connectivity
- Android Mobile Device
 - 5.1.1 or later



Android Setup:

1. Turn on the Android Mobile Device
2.  Tap the **Settings** icon on the Android Device.
3. Turn on the Android Smartphone **Mobile hotspot and tethering**>**Select Mobile Hotspot** by sliding the button right. The button should show green. Make sure to note the **Wi-Fi PASSWORD**. It will be entered the test set to connect it to the Hotspot.

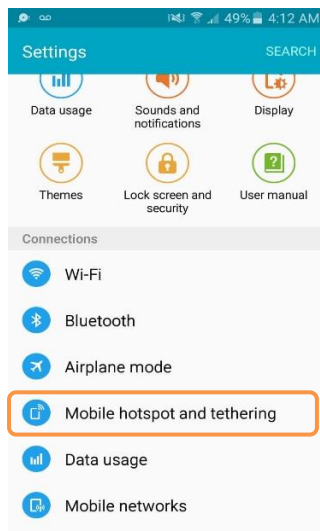


Figure 1: Android Settings screen

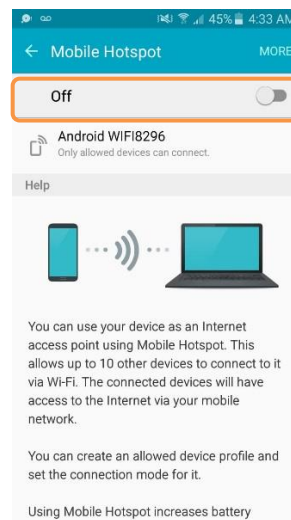


Figure 2: Mobile Hotspot screen

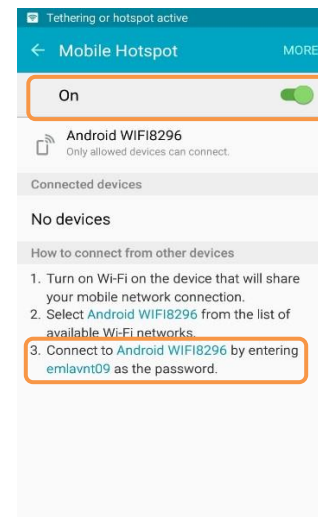




Figure 3: Android Personal Hotspot

T-BERD 2000 or SmartOTDR Setup:

-  Press the **ON/OFF** button to turn on the T-BERD/MTS-2000 or SmartOTDR
-  Press the **HOME** button to display the Home Screen

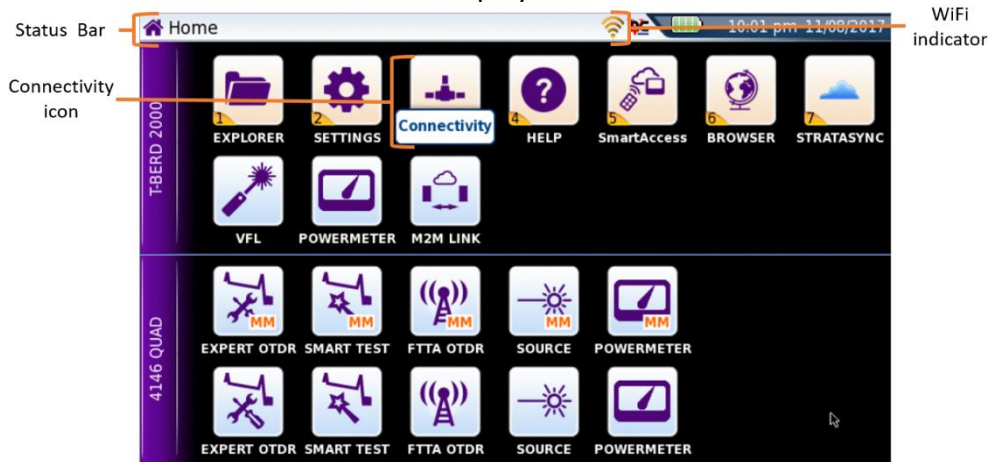


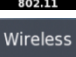
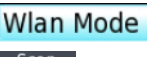



Figure 4: Home Screen

-  Tap the **Connectivity** icon to display connectivity options.
-  Tap the **Wireless 802.11** icon to display Wireless Connectivity settings.
-  If the screen displays “**Wireless is disabled**”, tap the **Wireless** soft key to enable WiFi.
-  Set **Wlan Mode** to **Wireless Client**.
-  Tap the **Scan SSID** Soft Key to list SSIDs.

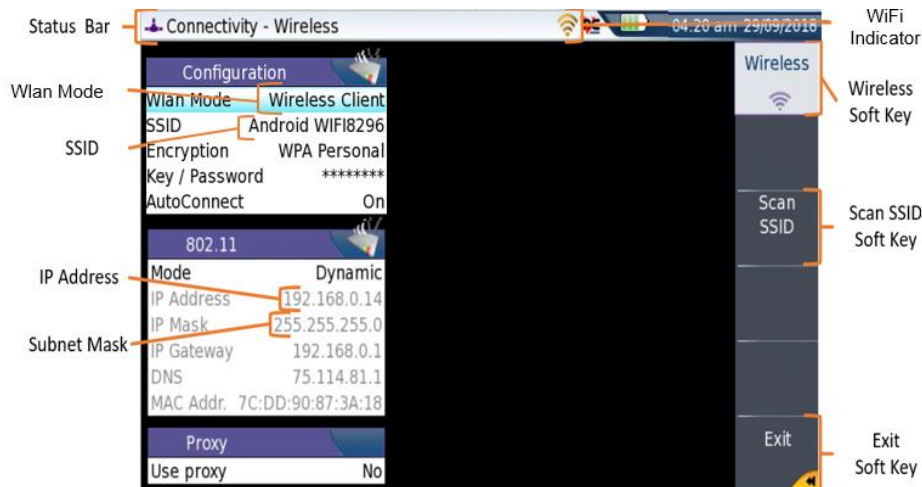


Figure 5: Wireless Connectivity settings

-  Tap or use the arrow keys to highlight the WiFi Hotspot and tap the **Select** soft key.


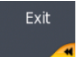
9. Enter the Wi-Fi Password from the Android's Personal Hotspot setting.
10.  If Wi-Fi Connection is established, the Wi-Fi icon in the Status Bar will turn yellow.
11.  Tap the **Exit** soft key to return to the **Connectivity** screen. The IP Address and SSID are displayed in this screen.



Figure 6: Connectivity screen