

# Compensate Load Coil ONX-580, ONX-580A, ONX-580P


## Exploring the front panel

The controls and LEDs on the front panel, shown in [Figure 3](#), are used to operate the OneExpert DSL, set up tests, and view data.




Figure 1. ONX-580 Front Panel

# Compensate Load Coil ONX-580, ONX-580A, ONX-580P

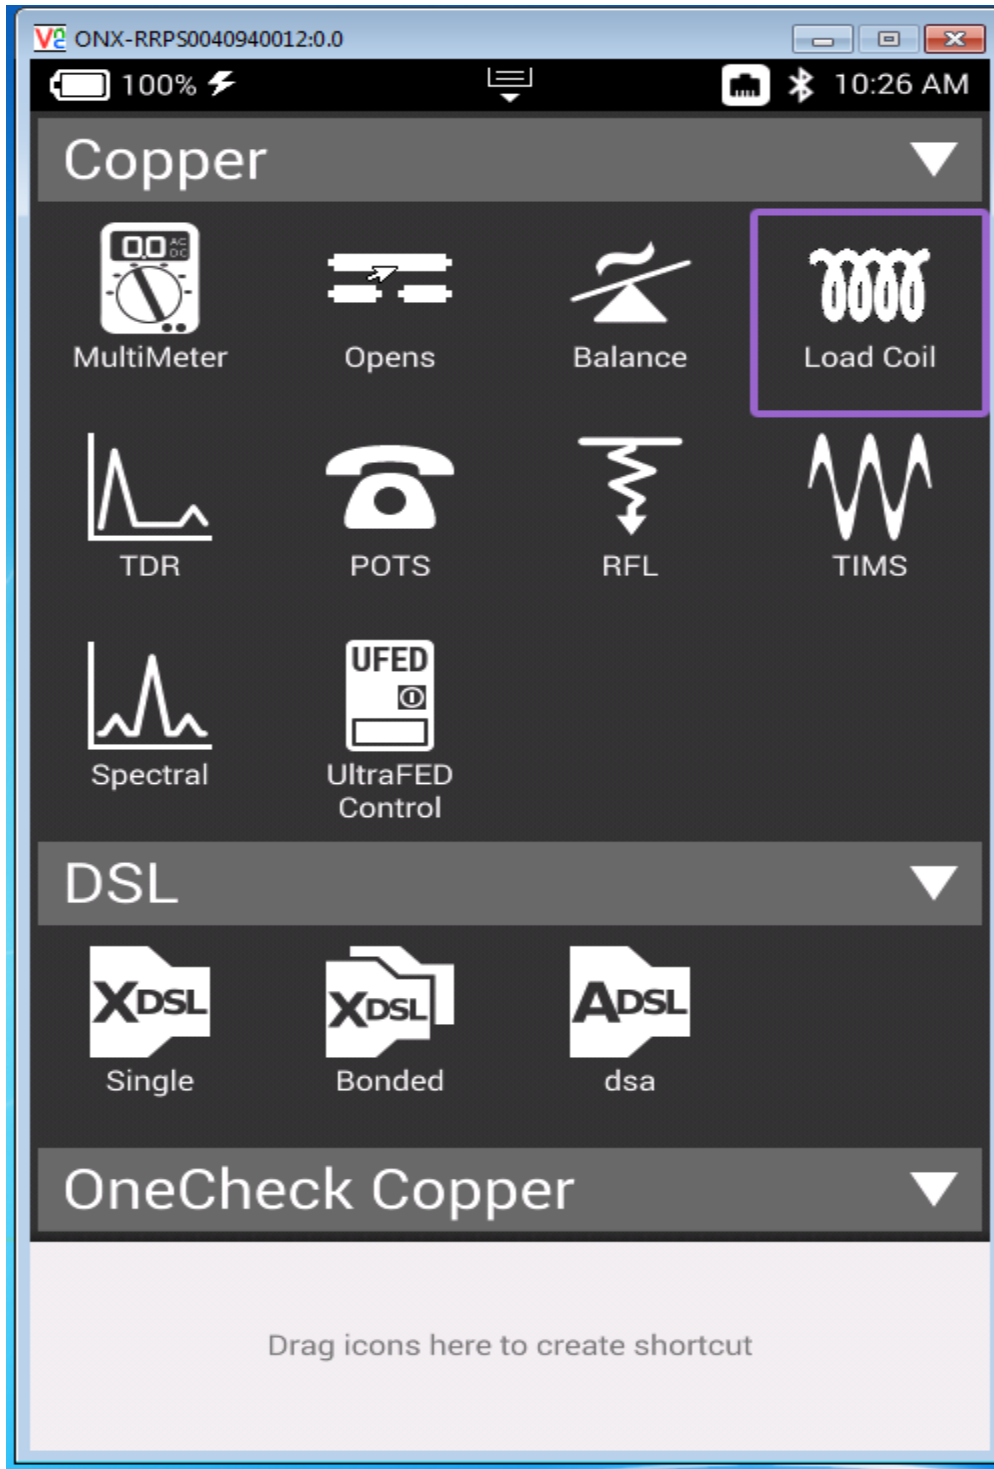


1. From the Copper menu or from the MultiMeter screen, touch **Load Coil**

# Compensate Load Coil ONX-580, ONX-580A, ONX-580P

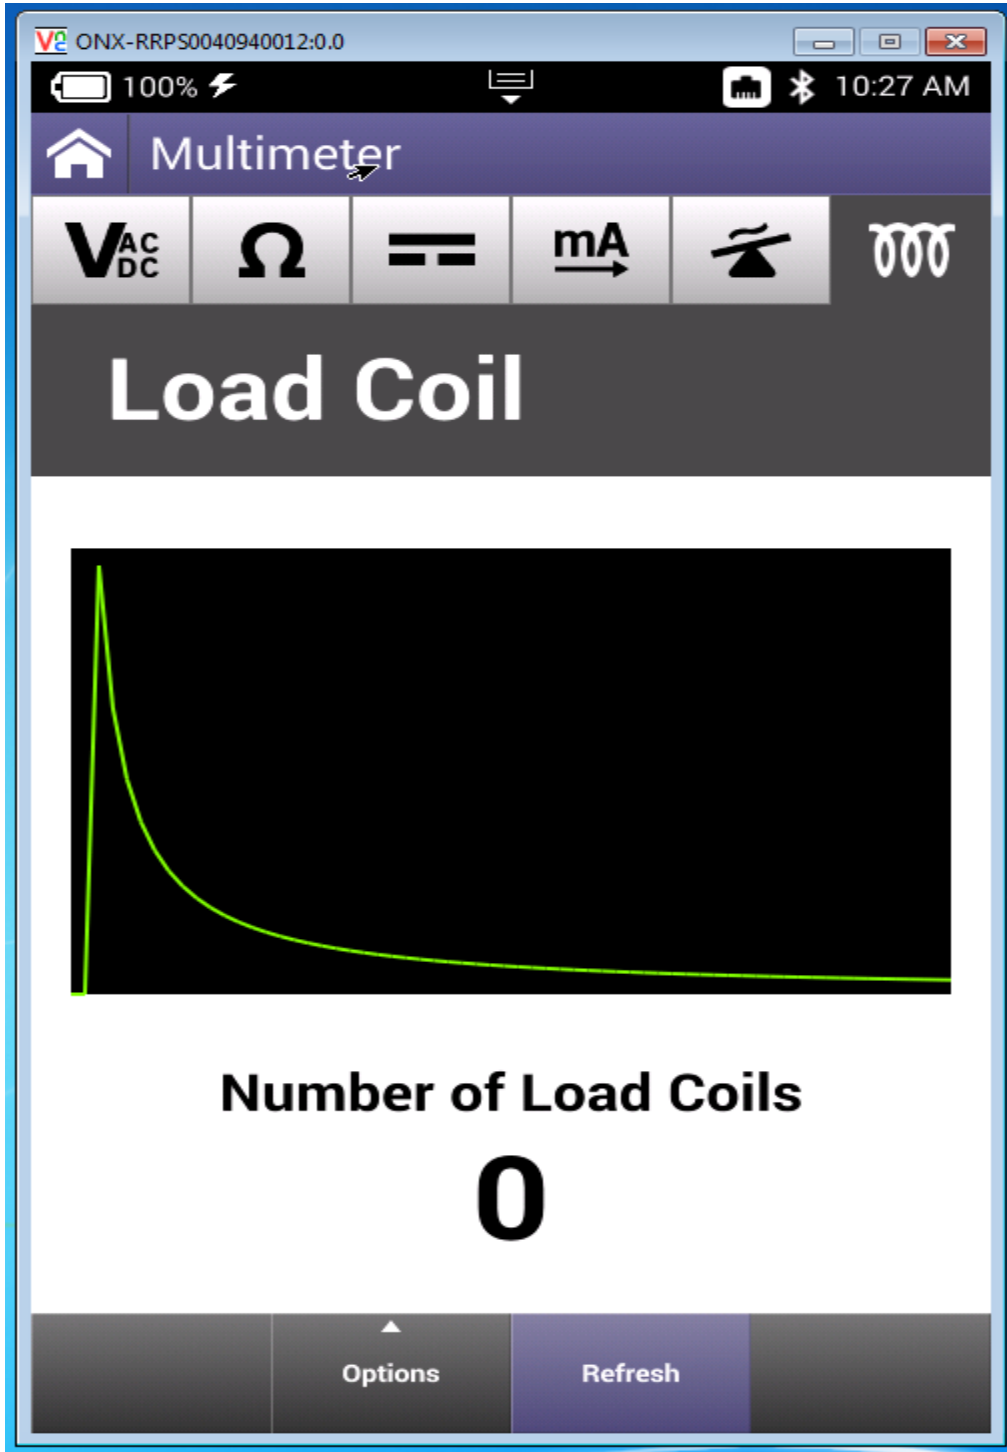

2. The Load Coil menu appears:

## Compensate Load Coil ONX-580, ONX-580A, ONX-580P

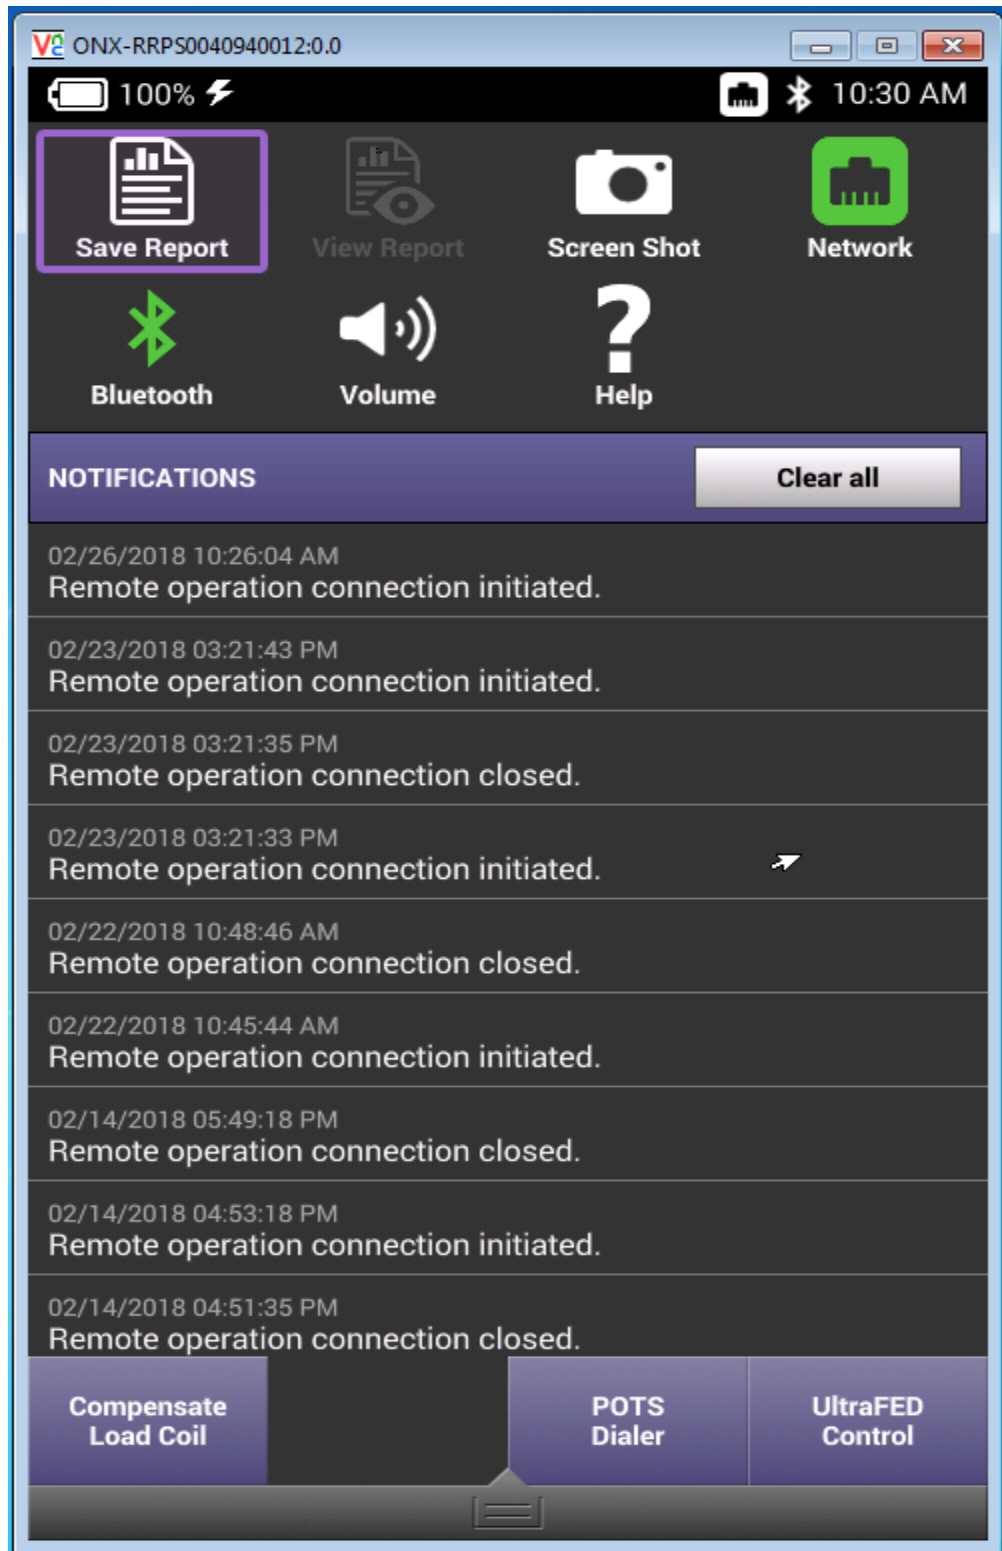

3. Select the system Tray Key and the Select Compensate Load Coil