

INSPECTING & CLEANING MULTI-FIBER OPTICAL CONNECTORS

aka Ribbon, MT, MPO & MTP® Connectors

BEST PRACTICES



PROCESS PROCEDURES

The fiber inspection, cleaning and testing procedures documented in this manual are recommendations made by JDSU. Please reference your company's process documents for standard tools and methods for your specific application.

ZP-PKG-0462
REV 2



NOTICE	Every effort was made to ensure that the information in this document was accurate at the time of printing. However, information is subject to change without notice, and JDSU reserves the right to provide an addendum to this document with information not available at the time that this document was created.
COPYRIGHT	© Copyright 2008 JDSU, LLC. All rights reserved. JDSU, Enabling Broadband and Optical Innovation, and its logo are trademarks of JDSU, LLC. All other trademarks and registered trademarks are the property of their respective owners. No part of this guide may be reproduced or transmitted electronically or otherwise without written permission of the publisher.
TRADEMARKS	JDSU is a trademark of JDSU in the United States and other countries. CleanBlast is a registered trademark of JDSU. RibbonDrive is a trademark of JDSU. MTP is a registered trademark of US Conec, Ltd. IBC is a trademark of US Conec, Ltd. Molex is a registered trademark of Molex Incorporated. OptiTip is a trademark of Corning Incorporated. Specifications, terms, and conditions are subject to change without notice. All trademarks and registered trademarks are the property of their respective companies.
PATENTS	RibbonDrive Tips: US Patent No. 6,751,017 / 6,879,439 CleanBlast: US Patent No. 7,232.262
TESTED EQUIPMENT	All pre-qualification tests were performed internally at JDSU, while all final tests were performed externally at an independent, accredited laboratory. This external testing guarantees the unerring objectivity and authoritative compliance of all test results. JDSU's Commerce and Government Entities (CAGE) code under the North Atlantic Treaty Organization (NATO) is 0L8C3.
FCC INFORMATION	Electronic test equipment is exempt from Part 15 compliance (FCC) in the United States.
EUROPEAN UNION	Electronic test equipment is subject to the EMC Directive in the European Union. The EN61326 standard prescribes both emission and immunity requirements for laboratory, measurement, and control equipment. This unit has been tested and found to comply with the limits for a Class A digital device.
INDEPENDENT LABORATORY TESTING	This unit has undergone extensive testing according to the European Union Directive and Standards.

CONTENTS

INTRODUCTION TO FIBER INSPECTION	INSPECT BEFORE YOU CONNECT SM4
	Simple Solution.....4
	Proactive Inspection.....4
SINGLE VS. MULTI-FIBER	Single Fiber Connectors.....5
	Multi-fiber Connectors.....5
MULTI-FIBER CONNECTORS	Alignment Mechanism6
	Contact Area.....6
PATENTED X- & Y-AXIS PANNING KNOBS	Panning Knobs7
INSPECT	
	Bulkhead Inspection.....8
	Patch Cord Inspection.....9
IS IT CLEAN?	
	Zones & Acceptance Criteria.....10
	Grading Process.....10
ACCEPTANCE CRITERIA	Single-mode Connectors.....11
	Multimode Connectors.....11
CLEAN	
	CLEANBLAST [®] : Bulkhead Cleaning.....12
	CLEANBLAST [®] : Patch Cord Cleaning.....13
	IBC [™] CLEANER: Bulkhead Cleaning.....14
	IBC [™] CLEANER: Patch Cord Cleaning.....15
CONNECT	
	Good Fiber Connection.....16
	Fiber Connections.....16
APPENDIX A: JDSU RIBBONDRIIVE[™] TIPS	RibbonDrive [™] Inspection Tips.....17
	Connector & Tips Guide.....17
APPENDIX B: JDSU VIDEO PROBE MICROSCOPES	Digital Video Probe.....18
	Analog Video Probe.....18
APPENDIX C: JDSU CLEANBLAST[®] SYSTEMS	Portable & Bench-top Systems.....19

INTRODUCTION TO FIBER INSPECTION

INSPECT BEFORE YOU CONNECTSM

CONTAMINATION IS THE #1 SOURCE OF TROUBLESHOOTING in optical networks. A single particle mated into the core of a fiber can cause significant back reflection, insertion loss, and equipment damage. Visual inspection is the only way to determine if fiber connectors are truly clean before mating them.

The JDSU video fiber inspection probe and handheld display system is used to quickly and easily inspect connector end faces, which ultimately minimizes loss and optimizes test conditions. WESTOVER FBP series video probes, available in digital or analog and single- or dual-magnification (200/400X) models are high-performance, handheld microscopes designed for inspecting both “female” (bulkhead) and “male” (patch cord) connectors, as well as other optical devices. The probe microscope can also be combined with a USB converter module to inspect connectors via compatible test platforms and PC/laptop. This versatile system offers a wide range of configurable solutions that can meet the demands of any application.



JDSU's precision, stainless-steel fiber inspection tips and adapters are carefully designed and engineered to produce consistent and accurate inspection. These inspection tips are interchangeable and designed with a unique optics architecture, which enables the probe to interface with every connector and application in your network.

SIMPLE SOLUTION


By implementing a **SIMPLE yet IMPORTANT** process of proactively inspecting and cleaning before mating, you can prevent poor signal performance and equipment damage.

PROACTIVE INSPECTION

By **PROACTIVELY INSPECTING** your fiber optic connectors, you will...

- Reduce Network Downtime
- Reduce Troubleshooting
- Optimize Signal Performance
- Prevent Network Damage


INSPECT BEFORE YOU CONNECTSM

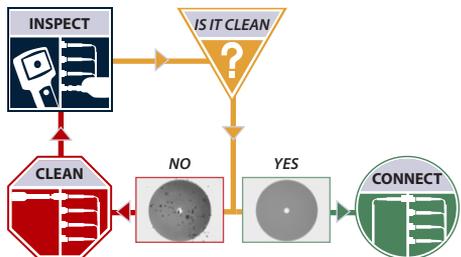

SINGLE VS. MULTI-FIBER

SINGLE FIBER CONNECTORS

Also called simplex connectors, these types contain a single fiber located in the center of a ceramic zirconia ferrule. The alignment of the mated connectors/fibers is achieved inside a ceramic or bronze mating sleeve within the bulkhead adapter.

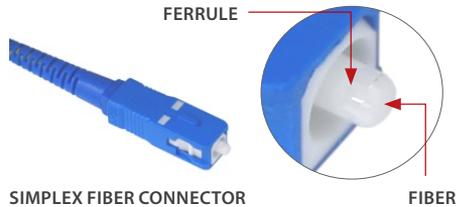


SIMPLEX FIBER CONNECTOR

FIBER

MULTI-FIBER CONNECTORS

A multi-fiber connector (often called "ribbon fiber connectors") contains one or more rows of fibers in a single connector to provide high-density connectivity. Alignment of the fibers is achieved when the "male" connector, which has outer pins, connects with the "female" connector, which has alignment holes (see page 6). The most common configuration is one row of 12 fibers, but standards exist for up to 6 rows of 12 fibers in one connector. The most common multi-fiber connector type is the MPO, also known by the brand MTP®.

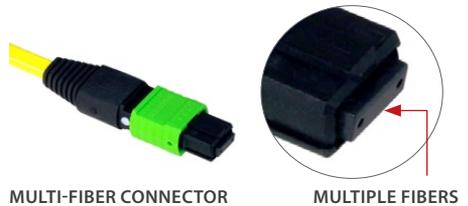


MULTI-FIBER CONNECTOR

MULTIPLE FIBERS


Multi-fiber connectors have a **larger contact area**, and are therefore more susceptible to contamination. All fibers on a multi-fiber connector must be clean for it to function properly. Contamination of one fiber can cause signal degradation on other fibers. For this reason, **inspection and cleaning are even more important for multi-fiber connectors.**

MTP is a registered trademark of US CONEC, Ltd.

SINGLE FIBER

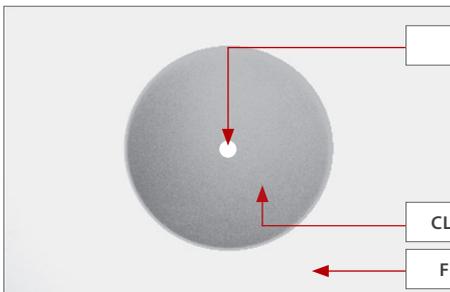

MULTI-FIBER

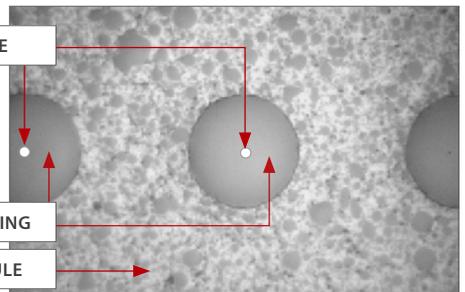

NOTE: Most single-mode multi-fiber connectors are APC and all multimode connectors are UPC.

MULTI-FIBER CONNECTORS

ALIGNMENT MECHANISM

Unlike simplex connectors, which use sleeves located inside the mating adapter body to align the two mated fibers, multi-fiber connectors are equipped with two precision metal guide pins and alignment holes that run parallel to the fibers, keeping the fibers lined up with tight tolerances.




"MALE" CONNECTOR
(w/ guide pins)





"FEMALE" CONNECTOR
(w/ alignment holes)

An adapter is used to fasten the keyed architecture of both the "male" and "female" connectors securely in place.

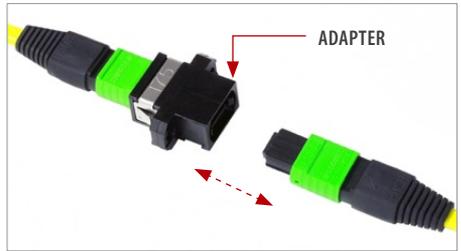

CONTACT AREA


The contact area of multi-fiber connectors is observably larger than the single fiber connector, therefore making it more susceptible to contamination and higher likelihood for signal loss.

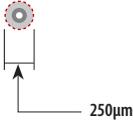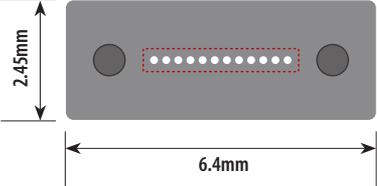SINGLE VS. MULTI-FIBER CONNECTORS		
	SINGLE	MULTI-FIBER
ALIGNMENT	Sleeve	Pins & Holes
FIBER DENSITY	1	4 – 72 (linear array)
SIZE & DIMENSIONS	<p>Multi-mode Single Fiber</p>  <p>250µm</p>	<p>12-fiber Array Multi-fiber</p> <p>Larger Area = More Susceptible to Contamination</p>  <p>2.45mm</p> <p>6.4mm</p>


PATENTED X- & Y-AXIS PANNING KNOBS

PANNING KNOBS

JDSU's patented panning knobs make the **RibbonDrive™ Tips** truly unique by allowing the user to inspect multiple fibers in a both the x- and y-axis planes.


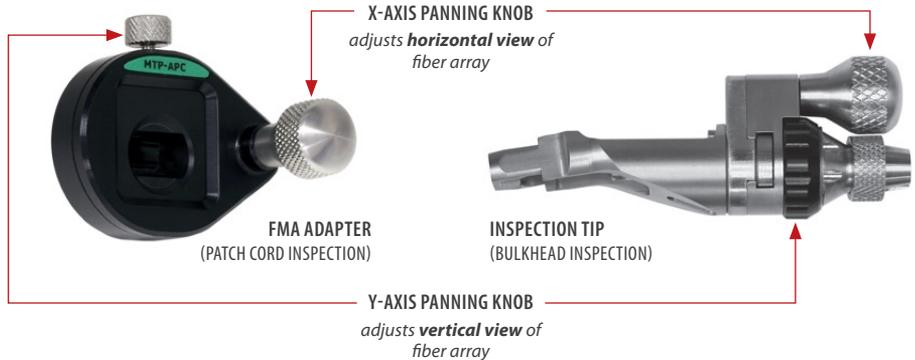


24-FIBER CONNECTOR


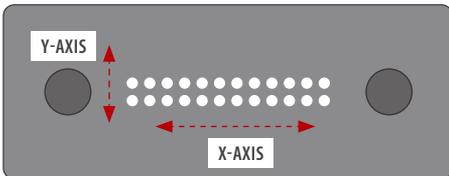


The **Y-AXIS PANNING KNOB** provides the **industry's only solution to inspecting connectors with multiple rows of fiber**. Allowing the user to easily pan up and down rows of fibers provides significant advantages in workflow and efficiency, and makes visually inspecting ALL individual fibers on the connector possible.

X-AXIS PANNING KNOB

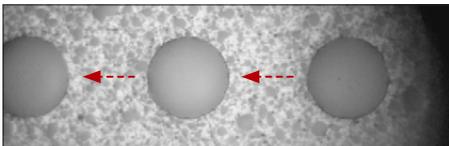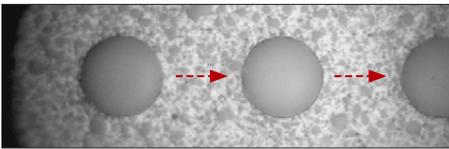

Y-AXIS PANNING KNOB

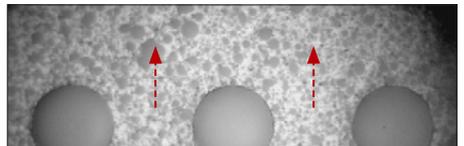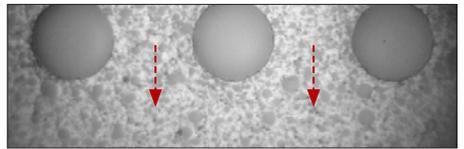






TIP INSTALLATION

1. Install the **FBPT-MTPA-L** inspection tip to the probe microscope.

INSPECT

2. Insert the scope into the bulkhead to inspect.
3. Turn the **FOCUS CONTROL** on the probe to focus the fiber image on the display.
4. Turn the **X- and Y-AXIS PANNING KNOBS** to view and inspect the individual fibers.
5. Determine whether **CLEAN** or **DIRTY**.
 - **IF EVERY FIBER IN THE ARRAY IS CLEAN, DO NOT TOUCH IT and CONNECT.**
 - **IF EVEN ONE FIBER IS DIRTY, then cleaning is required. CLEAN.**

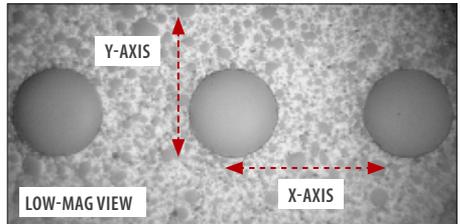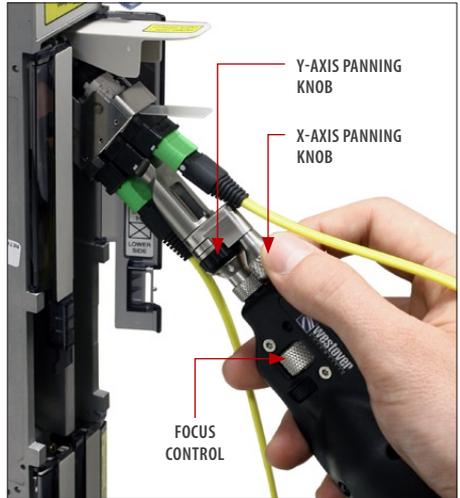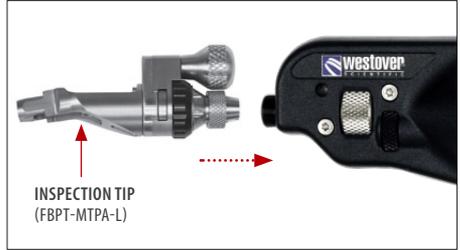



ADAPTER INSTALLATION

1. INSTALL PATCH CORD ADAPTER


A. Install the barrel assembly (**FBPP-BAP1**), the universal flare adapter (**FBPT-UFMA**) and the appropriate patch cord adapter (**FMA-MTPA shown**) to the probe.

OR

B. Install the inspection tip (**FBPT-MTPA-L shown**) and the patch cord mating adapter (**FCLT-MTP-MA shown**) to the probe.

INSPECT

2. Insert the patch cord into the adapter.
3. Turn the **FOCUS CONTROL** on the probe to focus the fiber image on the display.
4. Turn the **X- and Y-AXIS PANNING KNOBS** to view and inspect the individual fibers.
5. Determine whether **CLEAN** or **DIRTY**.
 - **IF EVERY FIBER IN THE ARRAY IS CLEAN**, DO NOT TOUCH IT and **CONNECT**.
 - **IF EVEN ONE FIBER IS DIRTY**, then cleaning is required. **CLEAN**.

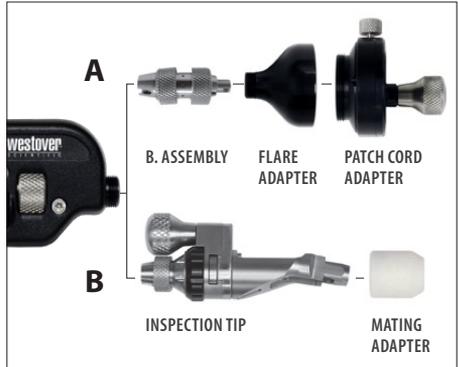



DIRT IS EVERYWHERE, and a typical dust particle (2–15 μ in diameter) can significantly affect signal performance and cause permanent damage to the fiber end face. Most field test failures can be attributed to dirty connectors, and most connectors are not inspected until the problem is detected, **AFTER** permanent damage has already occurred.

ZONES & ACCEPTANCE CRITERIA

ZONES are a series of concentric circles that identify areas of interest on the connector end face. The innermost zones are more sensitive to contamination than the outer zones.



ACCEPTANCE CRITERIA are a series of failure thresholds that define contamination limits for each zone.

GRADING PROCESS

1. Count/measure the particles/contamination that are on the fiber surface.
2. Estimate or use a grading overlay to **GRADE** the fiber by determining the number and size of each particle that are present in each of the 2 fiber zones.
 - **IF ACCEPTABLE**, DO NOT TOUCH IT and **CONNECT**.
 - **IF NOT ACCEPTABLE**, **CLEAN**.

A. CORE ZONE
B. CLADDING ZONE

ZONES OVERLAYS

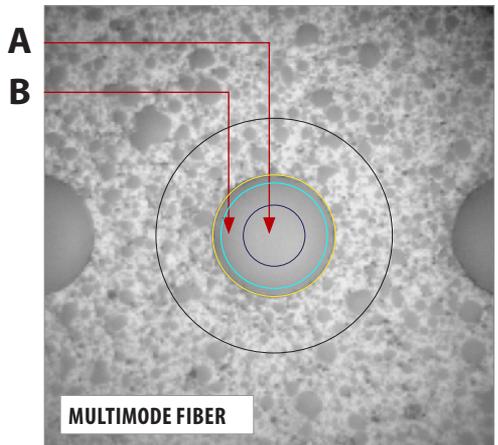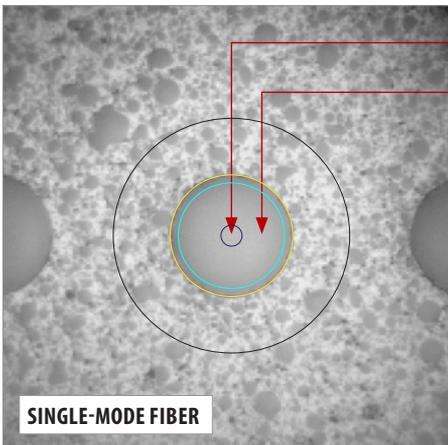

ACCEPTANCE CRITERIA



The tables below list the **ACCEPTANCE CRITERIA** standardized by the **International Electrotechnical Commission (IEC)** for single-mode and multimode connectors as documented in *IEC 61300-3-35 Ed. 1.0*.

SINGLE-MODE CONNECTORS

ZONE NAME (Diameter)	SCRATCHES	DEFECTS
A. CORE Zone (0–25 μm)	none	none
B. CLADDING Zone (25–115 μm)	no limit $\leq 3\mu\text{m}$ none $> 3\mu\text{m}$	no limit $< 2\mu\text{m}$ 5 from 2–5 μm none $> 5\mu\text{m}$

MULTIMODE CONNECTORS

ZONE NAME (Diameter)	SCRATCHES	DEFECTS
A. CORE Zone (0–65 μm)	no limit $\leq 5\mu\text{m}$ 0 $> 5\mu\text{m}$	4 $\leq 5\mu\text{m}$ none $> 5\mu\text{m}$
B. CLADDING Zone (65–115 μm)	no limit $\leq 5\mu\text{m}$ 0 $> 5\mu\text{m}$	no limit $< 2\mu\text{m}$ 5 from 2–5 μm none $> 5\mu\text{m}$



CLEANBLAST® - ADVANCED FIBER CLEANING SYSTEM (PORTABLE)



6.4" TFT LCD DISPLAY (OPTIONAL)

FIBER INSPECTION PROBE (OPTIONAL)

CLEANING SOLVENT REFILL

HANDSET

5' CLEANING HOSE

1. Install the MTP® cleaning tip (**FCLT-MTP**) to the CleanBlast® handset.
2. Insert the handset into the bulkhead, apply light pressure and push the **RUN BUTTON** to initiate cleaning.
3. **INSPECT** the bulkhead.
4. Determine whether **CLEAN** or **DIRTY**.
 - **IF CLEAN**, DO NOT TOUCH IT and **CONNECT**.
 - **IF DIRTY**, repeat **CLEAN**.



CLEANING TIP
(FCLT-MTP)





RUN BUTTON



CLEANBLAST® - ADVANCED FIBER CLEANING SYSTEM (PORTABLE)




1. Install the MTP® cleaning tip (**FCLT-MTP**) and the patch cord mating adapter (**FCLT-MTP-MA**) to the CleanBlast® handset.
2. Insert the patch cord into handset, apply light pressure and push the **RUN BUTTON** to initiate cleaning.
3. **INSPECT** the patch cord.
4. Determine whether **CLEAN** or **DIRTY**.
 - **IF CLEAN**, DO NOT TOUCH IT and **CONNECT**.
 - **IF DIRTY**, repeat **CLEAN**.

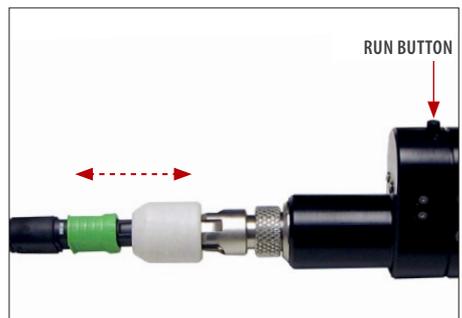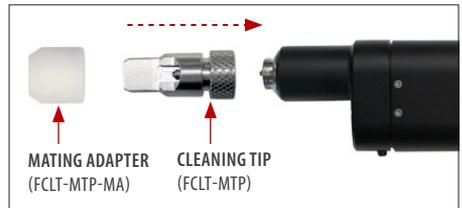



IBC™ CLEANER

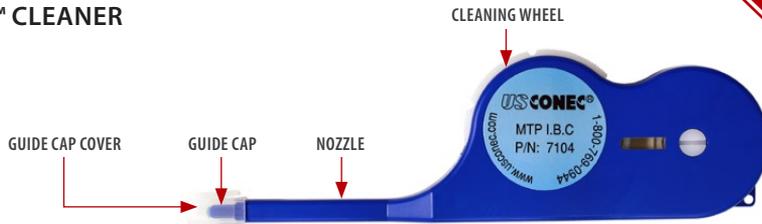

1. PULL OFF the **GUIDE CAP**.

DRY CLEAN

2. Insert the cleaning tool into the bulkhead and turn the **CLEANING WHEEL BACKWARDS** UNTIL "CLICK" 2 TIMES.
3. **INSPECT** the bulkhead.
4. Determine whether **CLEAN** or **DIRTY**.
 - **IF CLEAN**, DO NOT TOUCH IT and **CONNECT**.
 - **IF DIRTY**, either repeat **DRY** cleaning **OR** go to **WET → DRY** cleaning.

WET → DRY CLEAN


5. Apply/pump the cleaning solvent onto a sheet of clean fiber wipe.
6. Dab the cleaning tool onto the wet area of the wipe to moisten the cleaning tip, then **GO TO STEP 2**.



REPEAT STEPS 2, 3, AND 4 IF NECESSARY



IBC™ CLEANER

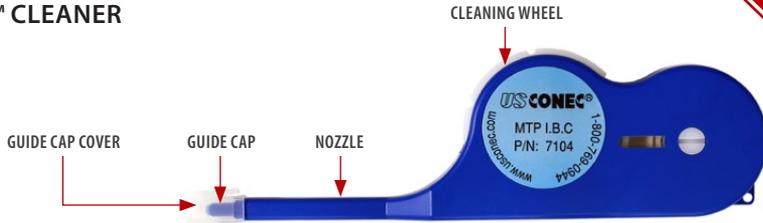

1. Carefully **PULL OUT** the **GUIDE CAP COVER**.

DRY CLEAN

2. Insert the patch cord into the cleaning tool, apply slight pressure and turn the **CLEANING WHEEL BACKWARDS UNTIL "CLICK" 2 TIMES**.
3. **INSPECT** the patch cord.
4. Determine whether **CLEAN** or **DIRTY**.
 - **IF CLEAN**, DO NOT TOUCH IT and **CONNECT**.
 - **IF DIRTY**, either repeat **DRY** cleaning **OR** proceed to **WET → DRY** cleaning.



WET → DRY CLEAN

5. Apply/pump the cleaning solvent onto a sheet of clean fiber wipe.
6. Wipe the end of the fiber connector on the wet area of the wipe, then **GO TO STEP 2**.




REPEAT STEPS 2, 3, AND 4 IF NECESSARY



GOOD FIBER CONNECTION

There are **3 BASIC PRINCIPLES** that are critical to achieving an efficient fiber optic connection:

1. **PERFECT CORE ALIGNMENT**
2. **PHYSICAL CONTACT**
3. **PRISTINE CONNECTOR INTERFACE**

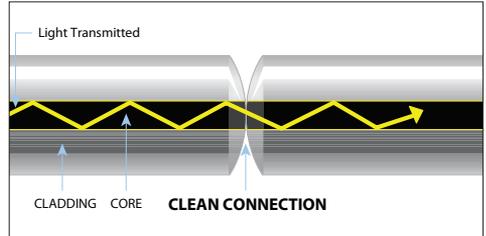

Today's connector design and production techniques have eliminated most of the challenges to achieving **CORE ALIGNMENT** and **PHYSICAL CONTACT**.

What remains challenging is maintaining a **PRISTINE END FACE**. As a result, **CONTAMINATION IS THE #1 SOURCE OF TROUBLESHOOTING** in optical networks.

FIBER CONNECTIONS

Optical connections are made for one of two reasons:

1. **COMPLETING A SYSTEM LIGHT PATH (Tx to Rx)**

Connectors are used extensively throughout optical networks. They give us the ability to reconfigure the network and provision services. If contamination is present in the light path, system performance will be degraded.

Always **INSPECT** and, if necessary, **CLEAN** the optical port and optical cable for contamination before connecting.

2. **CONNECTING A TEST DEVICE TO PART OF THE SYSTEM**

Test devices are frequently connected and disconnected to elements of the network. Often, test leads are systematically connected to each port in a network element in sequence. This duty cycle makes test leads especially prone to contamination and damage. If a test lead is contaminated, it can quickly spread that contamination through a large portion of the network.

Always **INSPECT** and, if necessary, **CLEAN** the network port and test lead for contamination before connecting.

APPENDIX A: JDSU RIBBONDRIVE™ TIPS

RIBBONDRIVE™ TIPS

JDSU's patented **RIBBONDRIVE™** tips are specialty tips that allow inspection of high-density, multi-fiber array connectors that are mounted within a bulkhead adapter. Each tip mates securely with connectors using a precision-keyed mating adapter interface. The patented “panning knobs” allow the user to view each fiber individually in both the X- and Y-AXIS.

NOTE: Additional multi-fiber (*RibbonDrive™*) inspection tips are available for other types of connectors (e.g., *MPX, MT ferrule, HBMT, OGI, Molex, SMC, etc.*).

CONNECTOR TYPE	INSPECTION TIP	APPLICATION
 MTP®/UPC	FBPT-MTP 	Inspects MTP®/UPC connector through a bulkhead (female interface).
	FBPT-MTP-A6 	Inspects MTP®/UPC connector through a bulkhead (female interface) - 60° ANGLE .
 MTP®/APC	FBPT-MTPA 	Inspects MTP®/APC connector through a bulkhead (female interface).
	FBPT-MTPA-L 	Inspects MTP®/APC connector through a bulkhead (female interface) - LONG REACH w/ Y-AXIS panning knob .
 MOLEX® AR8	FBPT-AR8-24 FBPT-AR8G 	The FBPT-AR8-24 tip & AR8G guide allow inspection of MOLEX® AR8 array connectors (<i>plug and receptacle</i>) w/ Y-AXIS panning knob .
 OPTITIP®	FBPT-COD-MT 	Inspects OPTITIP® flat-polish connector (<i>plug and receptacle</i>).
	FBPT-COD-MTA 	Inspects OPTITIP® angle-polish connector (<i>plug and receptacle</i>).
FMA Adapter & Flare Adapter	FMA-MTPA & FBPT-UFMA	Inspects MTP® patch cords (male interface).
Mating Adapter	FCLT-MTP-MA	Mating adapter for inspecting MTP® patch cords (male interface).

APPENDIX B: JDSU WESTOVER VIDEO PROBE INSPECTION

DIGITAL VIDEO PROBE

JDSU's **WESTOVER P5000** digital probe microscope connects directly to PC/laptops via a USB 2.0 connection, and operates with **FIBERCHEK2™**, an advanced software that determines the acceptability of optical fiber end faces through advanced automated inspection and analysis.



USB 2.0 connection to PC/laptop



ANALOG VIDEO PROBE

JDSU's **WESTOVER FBP and FBE** analog probe microscopes connect directly to **WESTOVER HD DISPLAYS** (*HD1, HD2 or HD3*) or to a PC/laptop or JDSU test platform (*T-BERD/MTS or FST*) via a **USB ANALOG TO DIGITAL CONVERTER**.



with HD Series displays



with USB converter module



APPENDIX C: JDSU CLEANBLAST® SYSTEMS

JDSU's **CLEANBLAST®** system is an advanced fiber cleaning instrument that provides a fast, effective, repeatable and cost-effective (*less cost per clean than conventional cleaning methods at under \$0.01 per clean*) solution for removing loose dirt and debris from optical connectors. It utilizes a highly filtered stream of pressurized gas to create a high flow rate jet consisting of specially formulated cleaning solvent that blasts across the surface of the fiber, with nearly 100% effectiveness. Precision cleaning tips and adapters are also available for multiple configurations and connector types, allowing users to optimize their cleaning efficiency and performance. The CleanBlast® system also includes an input for an optional probe microscope, as well as a video output that can be connected to an external monitor or to a mounted LCD.

PORTABLE CLEANBLAST®



BENCH-TOP CLEANBLAST®



FEATURES & BENEFITS

- Provides rapid, controlled, and repeatable cleaning & removal of contamination from fiber end faces
- Utilizes a precise non-contact “air-solvent-air” combination to blast, remove and dissolve contamination
- Faster, more effective, and less cost per clean than other conventional cleaning methods
- Precision cleaning tips & adapters available to clean various types of “male” and “female” fiber connectors, including SC, FC, LC, ST, E2000, MPO, MPX, MT, MTP®, transceivers, etc.
- Inputs for optional video probe microscope and LCD display for fiber inspection
- Multiple system configurations for different applications

CLEANING TIP & ADAPTER	APPLICATION
FCLT-MTP 	Cleans MTP® connectors through a bulkhead (female interface).
FCLT-MTP-MA 	Mating adapter for cleaning MTP® patch cords (male interface).

All statements, technical information and recommendations related to the products herein are based upon information believed to be reliable or accurate. However, the accuracy or completeness thereof is not guaranteed, and no responsibility is assumed for any inaccuracies. The user assumes all risks and liability whatsoever in connection with the use of a product or its applications. JDSU reserves the right to change at any time without notice the design, specifications, function, fit or form of its products described herein, including withdrawal at any time of a product offered for sale herein. JDSU makes no representations that the products herein are free from any intellectual property claims of others. Please contact JDSU for more information. JDSU and the JDSU logo are trademarks of JDS Uniphase Corporation. Other trademarks are the property of their respective holders. © 2008 JDS Uniphase Corporation. All rights reserved.

Test and Measurement Regional Sales

NORTH AMERICA TEL: 1 866 228 3762 FAX: 1 301 353 9216	LATIN AMERICA TEL: +55 11 5503 3800 FAX: +55 11 5505 1598	ASIA PACIFIC TEL: +852 2892 0990 FAX: +852 2892 0770	EMEA TEL: +49 7121 86 2222 FAX: +49 7181 86 1222	www.jdsu.com/inspect
--	--	---	---	---