

QUICK CARD

Ethernet Layer 2 Traffic Generation

This document outlines how to set the T-BERD/MTS 5800 up as a Layer 2 Traffic Generator and measure Metro Ethernet key performance indicators (KPIs). Traffic may be generated head-to-head between two VIAVI Ethernet testers, or to a Loopback device.

- T-BERD/MTS 5800 equipped with the following:
 - Transport software release V31.2.1 or greater
 - C510M1GE test option for 10 Megabit to 1 Gigabit Ethernet
 - C510GELAN test option for 10 Gigabit Ethernet
 - C525GE test option for 25 Gigabit Ethernet
 - C540GE test option for 40 Gigabit Ethernet
 - C550GE test option for 50 Gigabit Ethernet
 - C5100GE test option for 100 Gigabit Ethernet
- Optical Transceiver supporting the line rate to be tested (SFP or QSFP)
- Cables to match the optical transceiver and the line under test
- Fiber optic inspection microscope (P5000i or FiberChek Probe)
- Fiber optic cleaning supplies



Figure 1: Equipment Requirements

LAUNCH TEST

- Press the Power button to turn on the T-BERD.
- 2. Tap the **Test** icon to at the top of the screen to display the Launch Screen.
- 3. Using the **Select Test** menu, Quick Launch menu, or Job Manager, launch the Ethernet Layer 2 Traffic test on Port 1 for the desired data rate. For example:

Ethernet ▶1GigE Optical ▶Layer 2 Traffic ► P1 Terminate.

- to open the **Tools** Panel and Reset Test to Defaults
- to continue.



Figure 2: Launch Screen

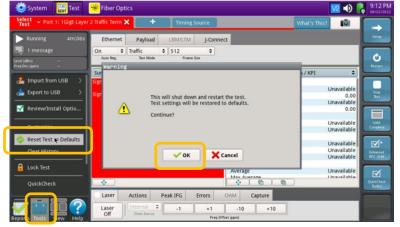



Figure 3: Tools Panel



QUICK CARD

CONFIGURE TEST

 - ► The following Information is needed to configure the test:
 - Physical Interface (10/100/1000BASE-T, 1000BASE-LX, 10GBASE-LR, 100GBASE-LR4, etc.)
 - Auto Negotiation settings of the port under test.



- Tap the Ethernet tab of the Quick Configuration menu and set Auto Neg. to the same value as the Ethernet port under test (On or Off).
- 2. Tap the **Setup** soft key on the top right side of the screen and proceed to page 3.



- 1. Tap the **Setup** soft key on the top right side of the screen.
- 2. Select the Interface/Connector folder.
- Insert desired Optical Transceiver into the Port 1 SFP or QSFP slot on the top of the T-BERD/MTS.
- Review SFP information:
 - Verify that the SFP operates on the required wavelength (850nm, 1310nm or 1550nm).
 - Verify that the SFP supports the required data rate (1G, 10G LAN, etc).
 - Note the Min and Max Tx Levels (dBm) and Max Rx Level (dBm) to assess if optical attenuators are required.



Figure 4: Work Order

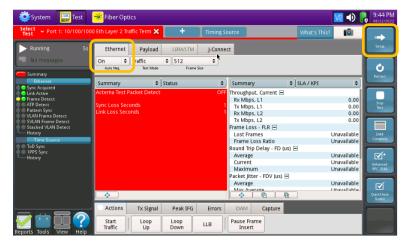


Figure 5: Quick Config, Auto Neg.

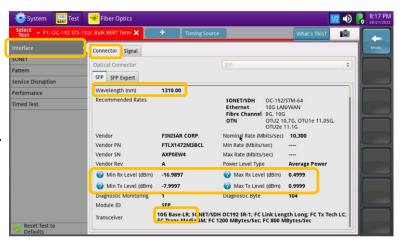


Figure 6: Setup, Interface/Connector



QUICK CARD

CONFIGURE TEST (CONTINUED)

- Select the Ethernet settings tab.
 - If you are testing a VLAN, set Encapsulation to VLAN, tap the VLAN field and enter your VLAN ID.
 - 2. If you are testing head-to-head with another T-BERD/MTS:
 - Tap the SA field to display the Factory Default Source MAC Address of your T-BERD/MTS. Provide this address to the operator of the other T-BERD/MTS, upon request.
 - Tap the DA field and enter the Source Address (SA) of the farend T-BERD/MTS in the Destination MAC field.
 - 3. If you wish to measure Bit Error Rate, tap the **Data** field, and set **Acterna Payload** to **BERT**.
- Select the Traffic settings tab. Set Load Unit to Bit Rate and set Load to the desired traffic rate or Committed Information Rate (CIR).
- ► Tap the **Results** soft key



Figure 7: Setup, Ethernet/VLAN

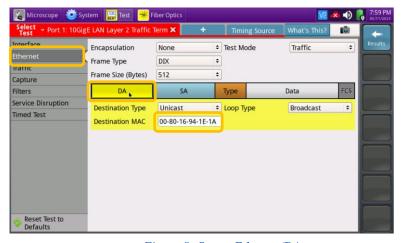


Figure 8: Setup, Ethernet/DA

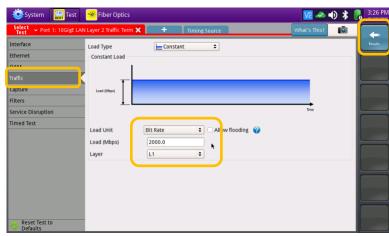


Figure 9: Setup, Traffic



QUICK CARD

CONNECT TO LINE UNDER TEST

► For Optical Interfaces:

- Use the VIAVI P5000i or FiberChek Probe microscope to inspect both sides of every connection being used (SFP, attenuators, patch cables, bulkheads)
 - Focus the fiber on the screen.
 - If it appears dirty, clean the fiber end-face and re-inspect.
 - If it appears clean, run the inspection test.
 - If it fails, clean the fiber and re-run the inspection test. Repeat until it passes.
- 2. If necessary, insert optical attenuators into the SFP TX and/or RX ports.
- Connect the SFP to the port under test using a jumper cable compatible with the line under test.
- 4. Select the **Laser** tab in the **Actions** panel.
- 5. Tap Laser off . The button will turn yellow and be relabeled Laser on .
- 6. Tap the **Restart** soft key
- 7. Verify the following:
 - Summary LED is yellow or green.
 - Signal Present LED is green.
 - Sync Acquired LED is green.
 - o Link Active LED is green.

► For Copper 10/100/1000BASE-T interfaces:

- Connect the 10/100/1000 RJ-45 jack to the port under test using CAT 5E or better cable.
- 2. Tap the **Restart** soft key
- 3. Verify the following:
 - Summary LED is yellow or green.
 - Sync Acquired LED is green.
 - Link Active LED is green.



Figure 10: Inspect Before You Connect



Figure 11: Optical Interface Results



Figure 12: Copper Interface Results



QUICK CARD

LOOP UP AND RUN TEST

- Select the Actions tab in the Actions Panel.
 - ▶ If you are testing head-to-head, to a hard loop, or if the loopback device is already in Local Loop Back (LLB) mode, proceed to step 2.
 - ► If the Loopback device is a T-BERD/MTS or another VIAVI compatible loopback device, tap to loop up the far end device.
- 2. Tap Start Traffic . The button will turn yellow and be relabeled Traffic Started .
- 3. Press the **Restart** soft key on the right side of the screen. Verify that:
 - ✓ The Right Results window shows

 "Rx Mbps, L1" is approximately equal to
 the Committed Information Rate.
 - ✓ The Right Results window shows
 Lost Frames = 0.
- Allow the Test to run for the desired duration.
 Verify that the Left Result window displays
 "ALL SUMMARY RESULTS OK" throughout the test.

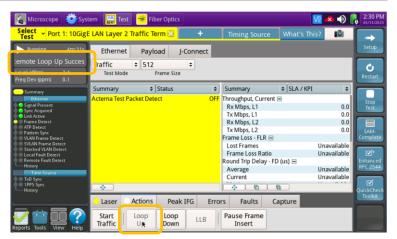


Figure 13: Loop Up



Figure 14: Start Traffic