
Restarting PathTrak services in 2.x with WebView

Go to services and stop the following:
Refer to figure: A
1.) PtSecurity
2.) PTServer
3.) PTstub
And stop on WebView side the:
Refer to figure: A
4.) Dcsdatacollector
To restart the services Start in this order:
Refer to figure: A
1.) PTstub
2.) PtServer
3.) PTsecurity (this service will start when someone tries to login.
Then start on the WebView side:
Refer to figure: A
4.) DCS DatacollectorService

Figure: A

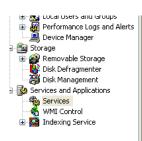

	sia .	Sabbores Sim	200,000	r rannaar	eocar system
	COM+ System Appl			Manual	Local System
	Computer Browser	Maintains a		Automatic	Local System
4.14	Cryptographic Serv	Provides th	Started	Automatic	Local System
٠,	DCOM Server Proc	Provides la	Started	Automatic	Local System
	DCSDataCollector		Started	Automatic	Local System
	DHCP Client	Manages n		Automatic	Local System
	Distributed Link Tra	Maintains li		Automatic	Local System
	Distributed Transac	Coordinate		Manual	Network S
	DNS Client	Resolves a	Started	Automatic	Network 5
	Error Reporting Ser			Automatic	Local System
	Event Log	Enables ev	Started	Automatic	Local System
	Extensible Authenti	Provides wi		Manual	Local System
	Fast User Switching	Provides m		Manual	Local System
	Google Update Ser	Keeps your		Automatic	Local System
	Google Update Ser	Keeps your		Manual	Local System
	Health Key and Cer	Manages h		Manual	Local System
	Help and Support	Enables He	Started	Automatic	Local System
	HID Input Service	Enables ge		Automatic	Local System
	HTTP SSL	This servic		Manual	Local System
	MAPI CD-Burning	Manages C		Manual	Local System
	Indexing Service	Indexes co		Manual	Local System
	IPSEC Services	Manages I	Started	Automatic	Local System
	Logical Disk Manager	Detects an		Manual	Local System
	🖏 Logical Disk Manag	Configures		Manual	Local System
	Messenger	Transmits		Disabled	Local System
	Mozilla Maintenanc	The Mozilla		Manual	Local System
	MS Software Shado	Manages s		Manual	Local System
	MySQL		Started	Automatic	Local System
	Net Logon	Supports p		Manual	Local System
	NetMeeting Remot	Enables an		Manual	Local System
	Network Access Pr	Allows win		Manual	Local System
	Network Connections	Manages o		Manual	Local System
	Network DDE	Provides n		Disabled	Local System
	Network DDE DSDM	Manages D		Disabled	Local System
	Network Location A	Collects an	Started	Manual	Local System
	Network Provisionin	Manages X		Manual	Local System
	NT LM Security Sup	Provides s		Manual	Local System
	ObjectStore Cache		Started	Automatic	Local System
	ObjectStore Server		Started	Automatic	Local System
	Performance Logs	Collects pe		Manual	Network S
	Plug and Play	Enables a c	Started	Automatic	Local System
	Portable Media Seri	Retrieves t		Manual	Local System
	Portmap		Started	Automatic	Local System
	Print Spooler	Loads files	Started	Automatic	Local System
	Protected Storage	Provides pr	Started	Automatic	Local System
-	PTSecurityServer		Started	Manual	Local System
	PTServer		Started	Automatic	Local System
L	PTStubServer		Started	Automatic	Local System
-	with the his	ter have have have have have have		harharharharharharharh	