## **Running a TrueSpeed Test with the ONX-CATV unit**

Note: The TrueSpeed function is an upgradeable function and might not be included with your ONX-CATV unit. If you do not have it, please contact Sales.Support@ViaviSolutions.com

- 1. Connect ONX-CATV unit to an Ethernet connection.
- 2. Scroll down to Ethernet Test -> Select Ethernet Test



 Make sure you get an IP Address. Once Network up is indicated with Green -> Select Test & Settings -> Then Select TrueSpeed -> Stop Test and Choose Server Settings on the bottom and enter the <u>VNF Server IP address</u> and then resume.

4	8	Ψ.	4 1-41 AM	42%		💲 01:17 PM	43%	Т.	💲 11:53 AM
â	Ethernet Test			TrueSp	beed		StrueSpeed	d Servers	
	2 Link Down	Netmask Gateway	etwork Up 192.168.0.17 255.255.255.0 192.168.0.1		Select profile	Primary Server	Primary Server Destination Type IPv4 Address		
Setup -		DNS	209.18.47.62	Default Upload: 2M	Download: 10M		Server Address	)	
٥	Ethernet Save	Load	Delete	Default Upload: 25M	Download: 150M		Username vtsuser		
Test —			VoiP	matt Upload: 20M	Download: 200M		Password		
E	) <u>N</u>			Default Upload: 10M	Download: 10M		Fallback Server		
F	ing FTP/HTTP			300mbps Upload: 20M Download: 300M			🗹 Enable Fallback	k Server	
(				New			Destination Type		
Web	Prowser						Server Address 142.129.0.67	)	
							Username vtsuser		
				1			Password		
Conn De	ails Tests & Setting	JS	Network Stop						

4. After that, you should see the results (see image below)



Viavi Solutions, Inc. CATV – Technical Support Team Support Phone Number: +1 (844) 468-4284 Ext 3-1-2 Support Email: CatvSupport@ViaviSolutions.com