

What is the SCPI command to remove a ROTAU in ONMSI system



To remove a ROTAU use the following SCPI command:

OTU:SWITCH:CONFIG:DEL <ROTAU_ID> with <ROTAU_ID> = 1 or 2 or 3”

For any other technical information inquiries, please contact us at tac.apac@viavisolutions.com