

Viavi MTS/T-BERD 5800-100G Software Update Instructions



September 27, 2017

Table of Contents

Scope..... 2

1. Network Upgrade 2

2. USB Upgrade 5

3. StrataSync..... 9

Scope

There are three methods to update T-BERD 5800-100G software:


1. Network upgrade - Use this method to update your T-BERD via an Internet connection.
2. USB upgrade - Use this method to update your T-BERD with a USB thumb drive.
3. StrataSync upgrade - Use this method if your T-BERD 5800-100G is managed using Viavi's StrataSync Asset Management system.

The T-BERD must be connected to AC Power, regardless of update method.

1. Network Upgrade


<i>Step</i>	<i>Action</i>	<i>Details</i>
1.	Power On	Press and hold the ON/OFF button to turn on the T-BERD 5800-100G
2.	AC Power	Connect the AC power adapter to the power connector on the side of the T-BERD 5800-100G.
3.	LAN Connection	Connect the Ethernet Management Port on the side of T-BERD 5800-100G to a network connection with internet access, using CAT 5E or better cable.


4. System Press the System icon, , at the top of the start-up screen, to display the System Menu.

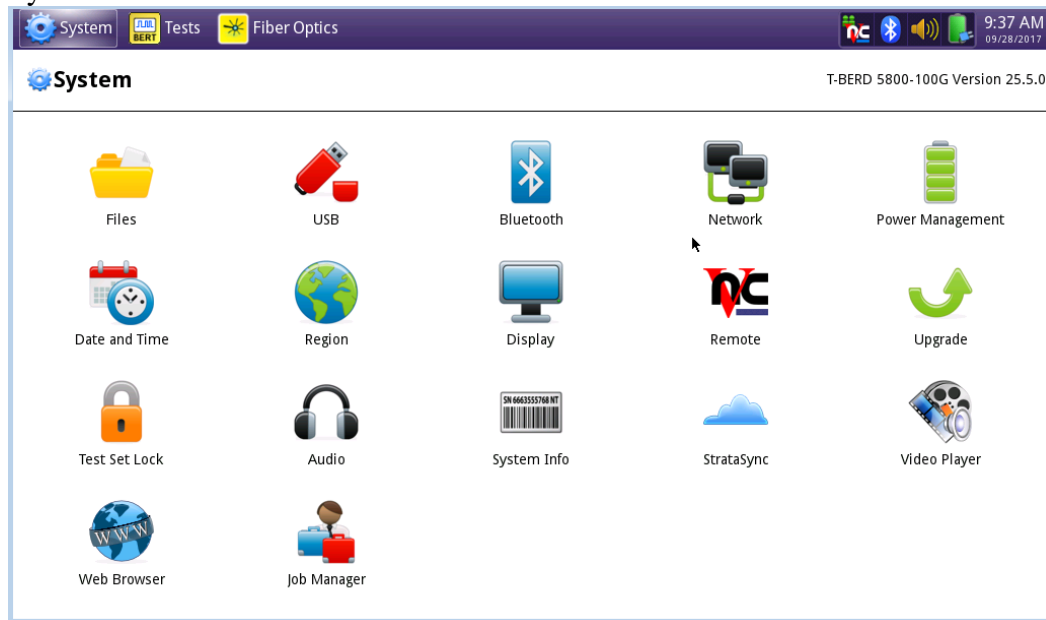




5. Network Settings


Press the Network icon,  , to display LAN Settings. Set **IP Mode** to “**DHCP**” for automatic IP address assignment or “**Static**” for manual input.

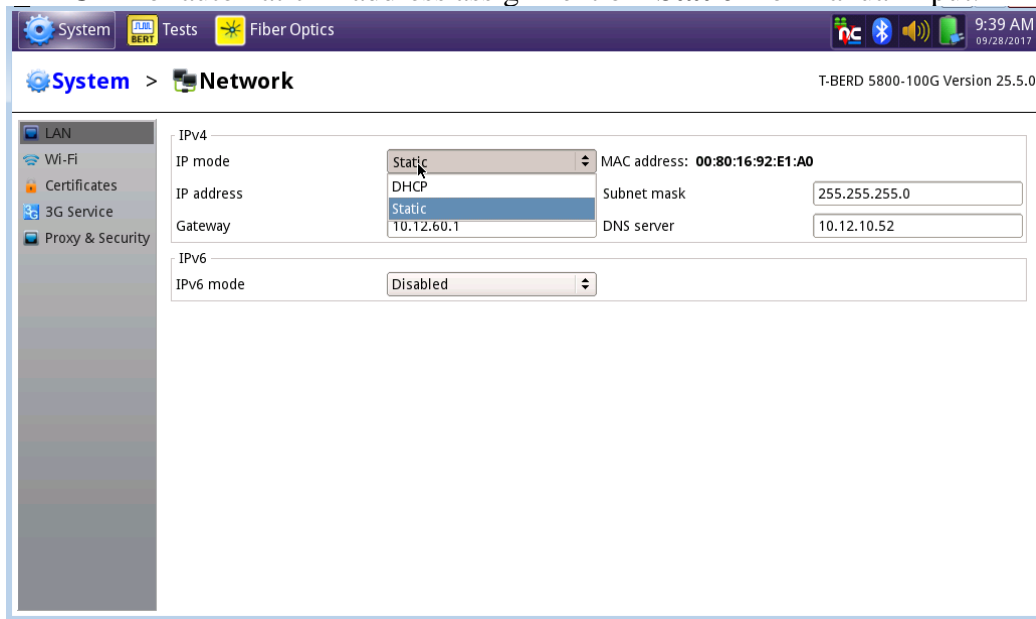


After configuring LAN settings, press the System icon,  , to redisplay the System Menu.



6. Upgrade


Press the Upgrade icon,  , to display upgrade methods.

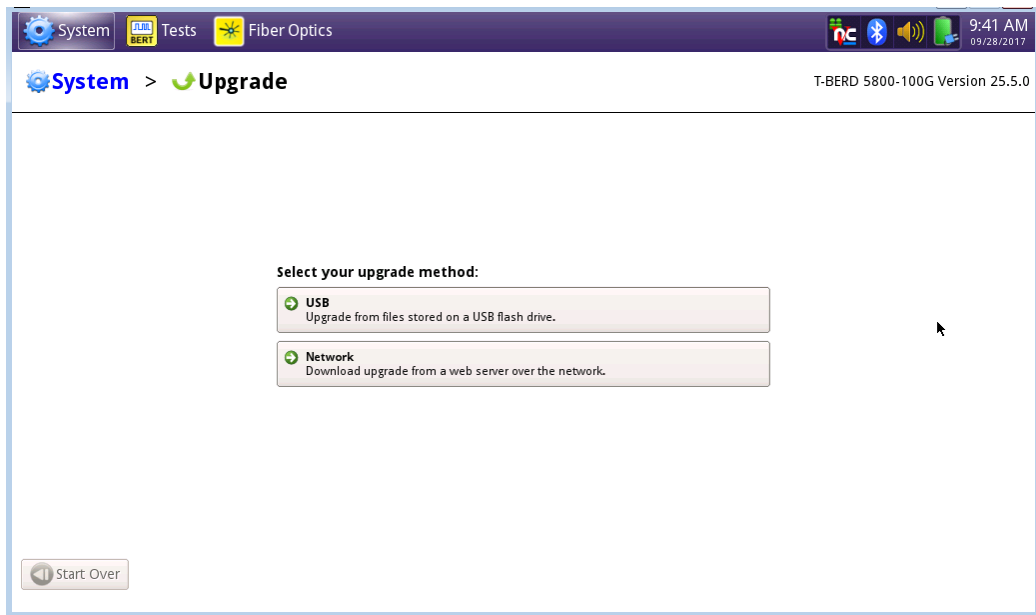

Network Upgrade Press display upgrade settings. Ensure that **Server Address** = “5800-100G.updatemyunit.net”

Network
Download upgrade from a web server over the network.

to

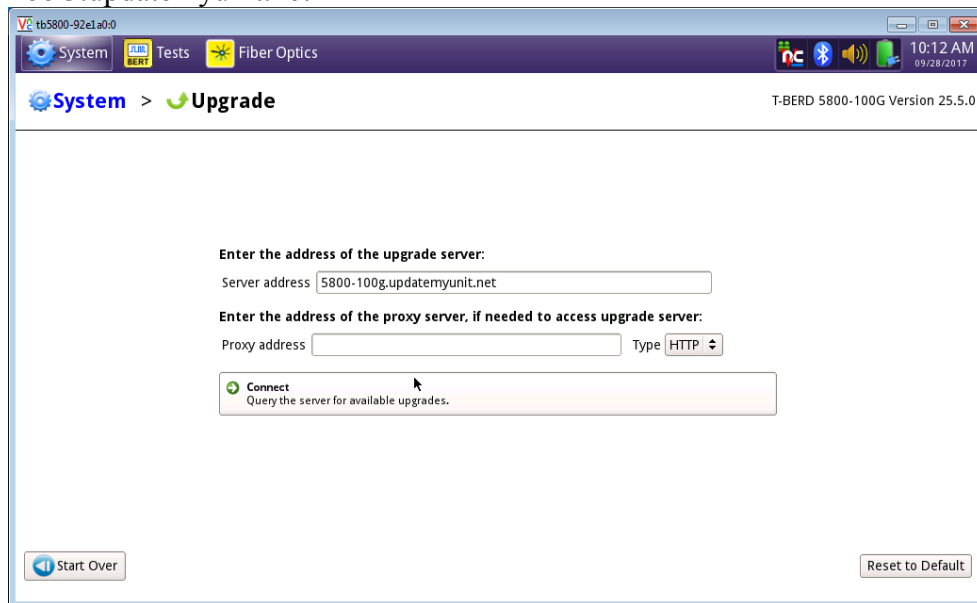

7. Connect

Press

Connect
Query the server for available upgrades.


to show

the upgrade versions available at upgrademyunit.net. Start Upgrade

Press **Start Upgrade**

and press **OK**


to initiate the upgrade.

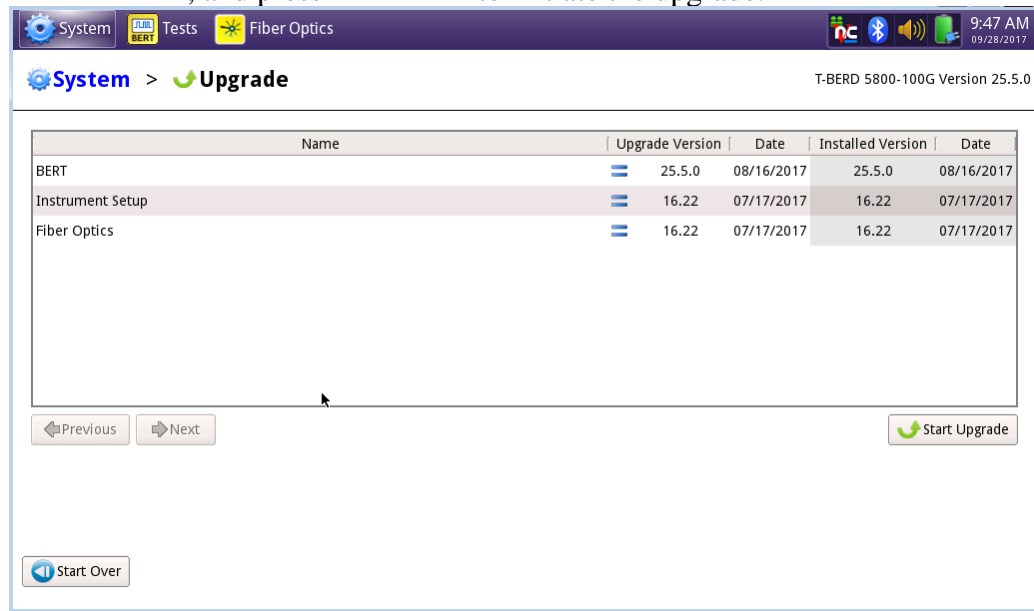

2. USB Upgrade

Step Action Details


1. Updatemyunit.net Using an internet browser on your PC or laptop, go to <http://updatemyunit.net/>

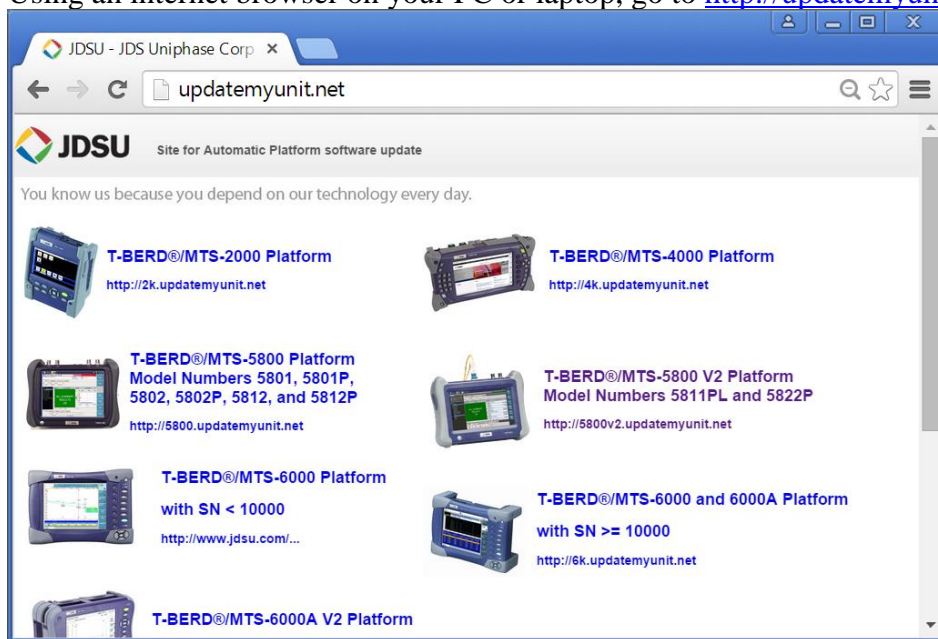


2. 5800v2

 <http://5800-100G.updatemyunit.net>

Click on to display the T-BERD 5800-100G upgrade portal.

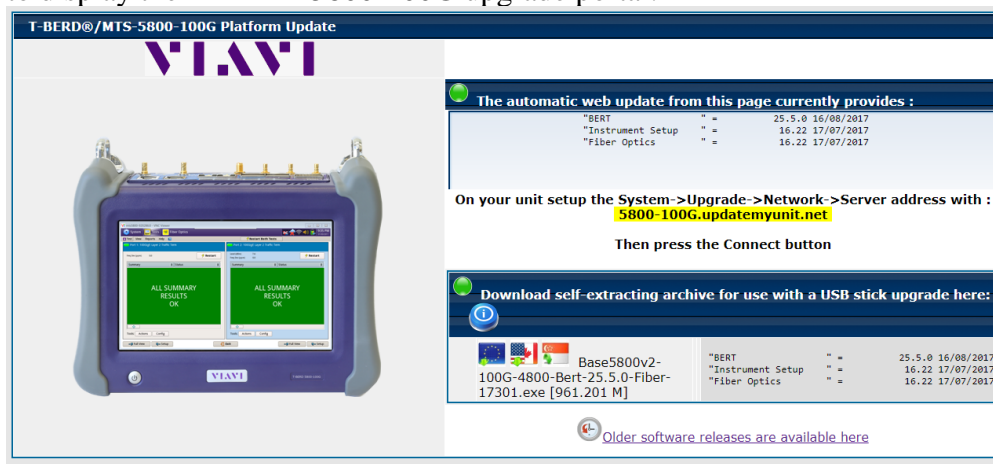



3. Download

Click on the US/Canadian Flag, , and click to download the current software revision from the North American download server. There are choices for EMEA and APAC Save it to your desktop.

4. USB Stick


Insert a USB thumb drive into the USB port on your PC or laptop.

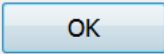
5. Extract Open and run the downloaded file, enter the path of the USB stick, and press  to extract files.

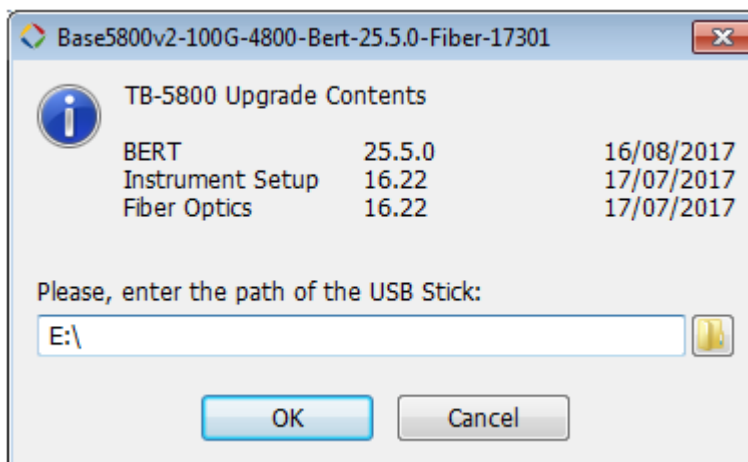


6. Eject Safely eject the USB drive from your PC or Laptop
7. Power on T-BERD Press and hold the ON/OFF button to turn on the T-BERD 5800-100G.
8. AC Power Connect the AC power adapter to the power connector on the side of the T-BERD 5800-100G.
9. USB Connect the USB Thumb Drive to one of the USB ports on the side of the T-BERD 5800-100G. An 8GB or smaller drive is recommended.


10. System

Press the System icon, , at the top of the start-up screen, to display the System Menu.

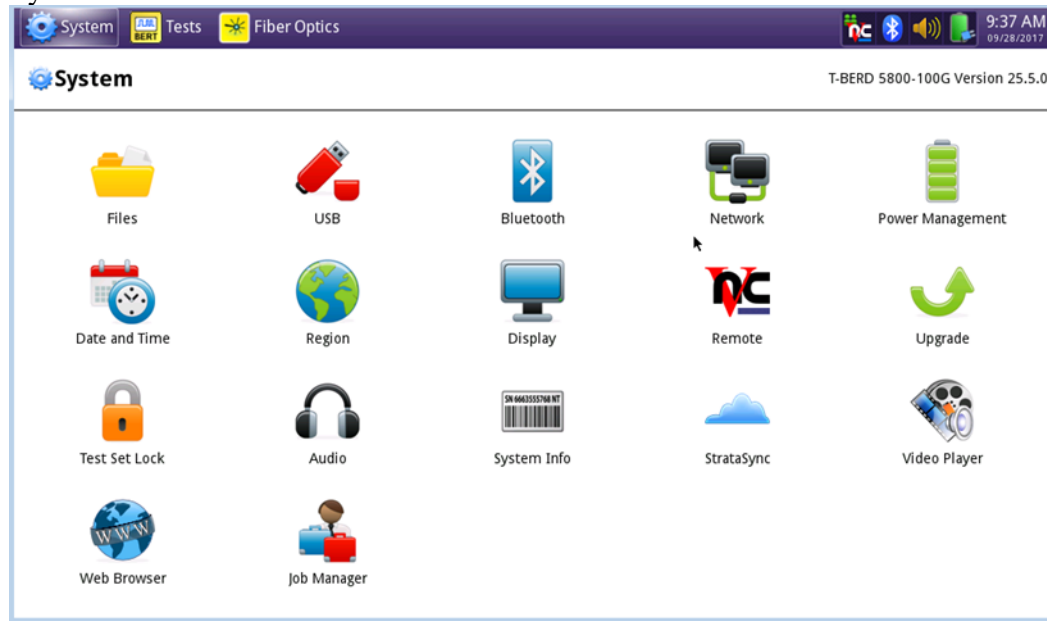


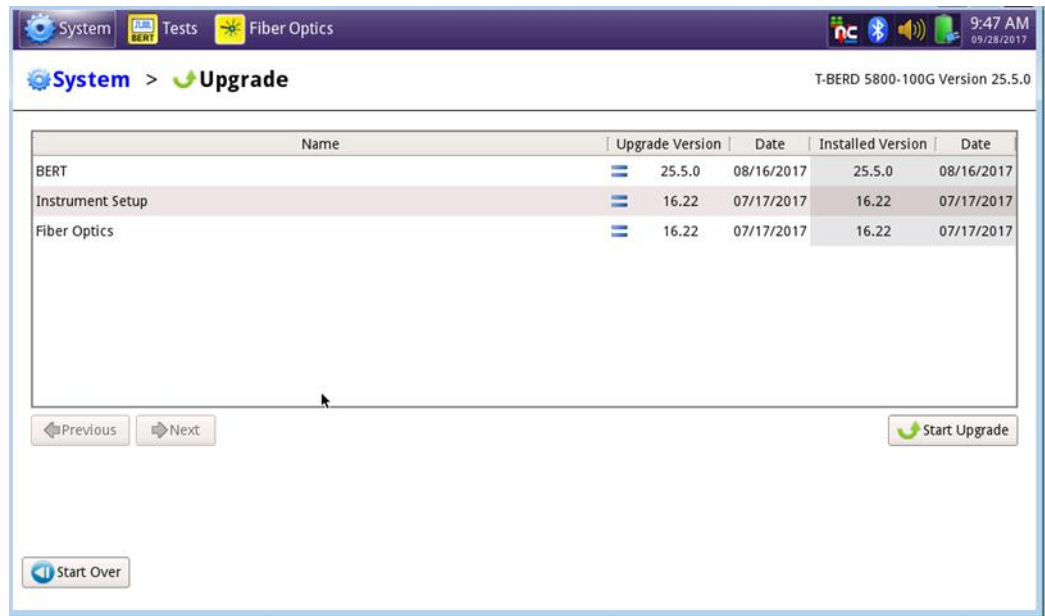
11. Upgrade

Press the Upgrade icon, , to display upgrade methods.

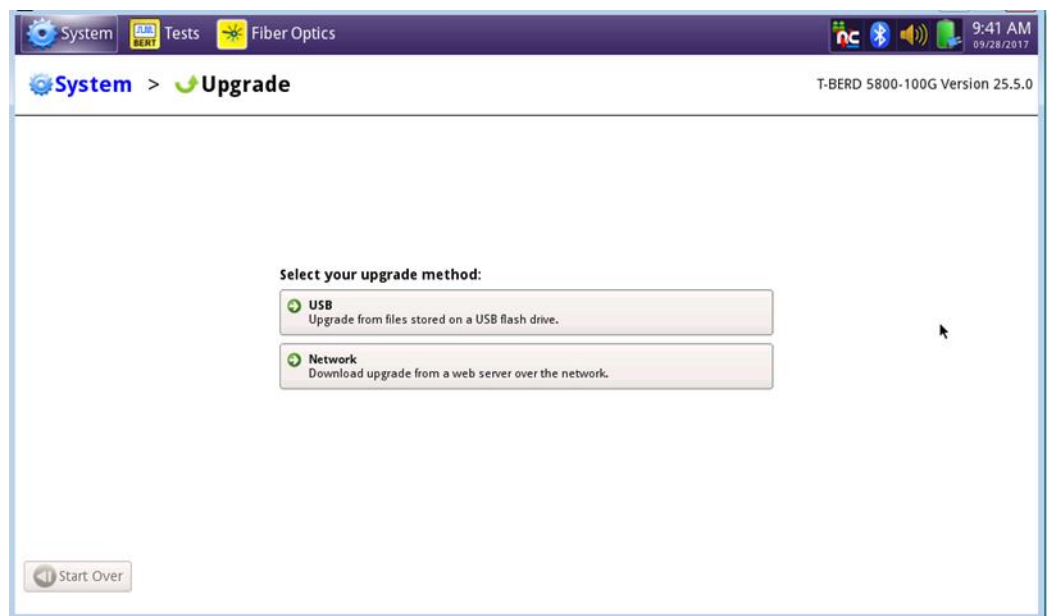

12. USB Upgrade


Press  to display upgrade versions available on the USB stick.




13. Start Upgrade

Press . Press  to initiate the upgrade.


3. StrataSync


<i>Step</i>	<i>Action</i>	<i>Details</i>
1.	Power On	Press and hold the ON/OFF button to turn on the T-BERD 5800-100G.
2.	AC Power	Connect the AC power adapter to the power connector on the side of the T-BERD 5800-100G.
3.	LAN Connection	Connect the Ethernet Management Port on the side of T-BERD 5800-100G to a network connection with internet access, using CAT 5E or better cable.
4.	System	Press the System icon,  , at the top of the start-up screen, to display the System Menu.

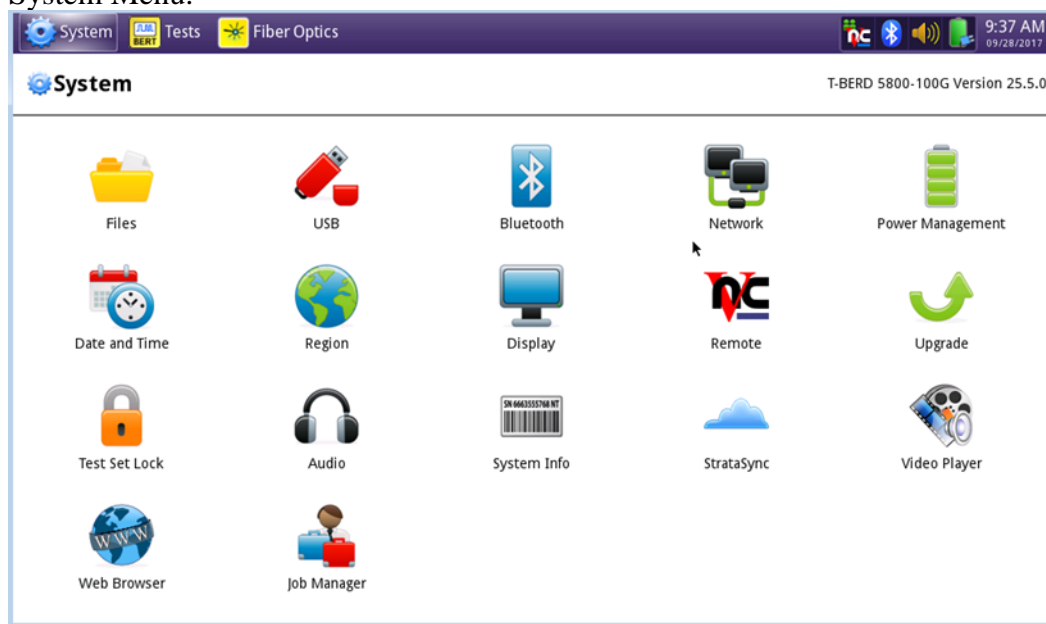




5. Network Settings


Press the Network icon, , to display LAN Settings. Set **IP Mode** to “**DHCP**” for automatic IP address assignment or “**Static**” for manual input.

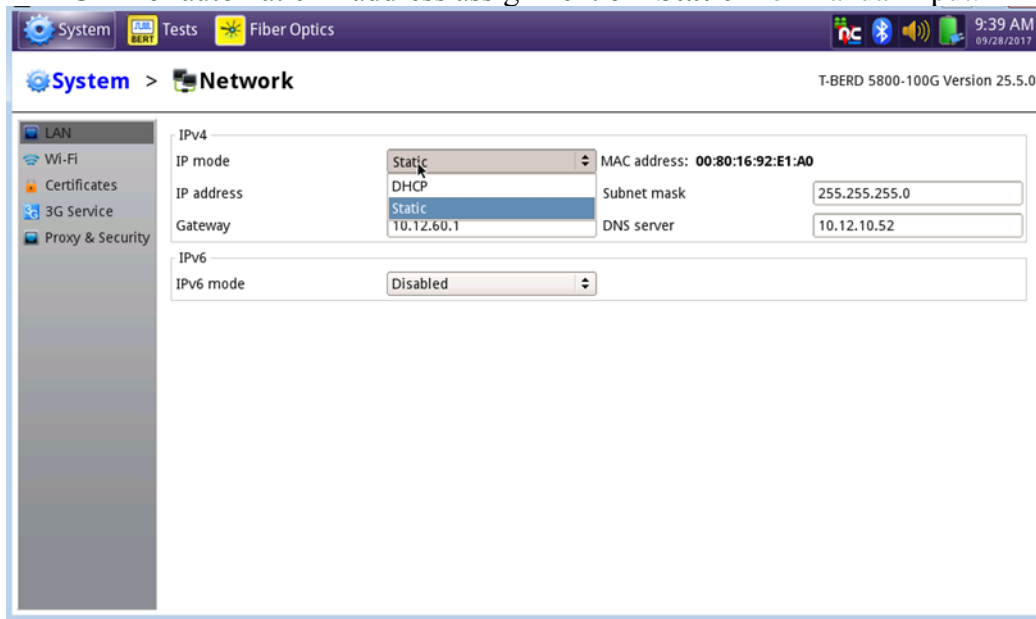


After configuring LAN settings, press the System icon, , to redisplay the System Menu.



6. StrataSync

Press the StrataSync icon, , to display StrataSync Settings. Ensure that **Account ID** and **Technician ID** match those of your StrataSync account.

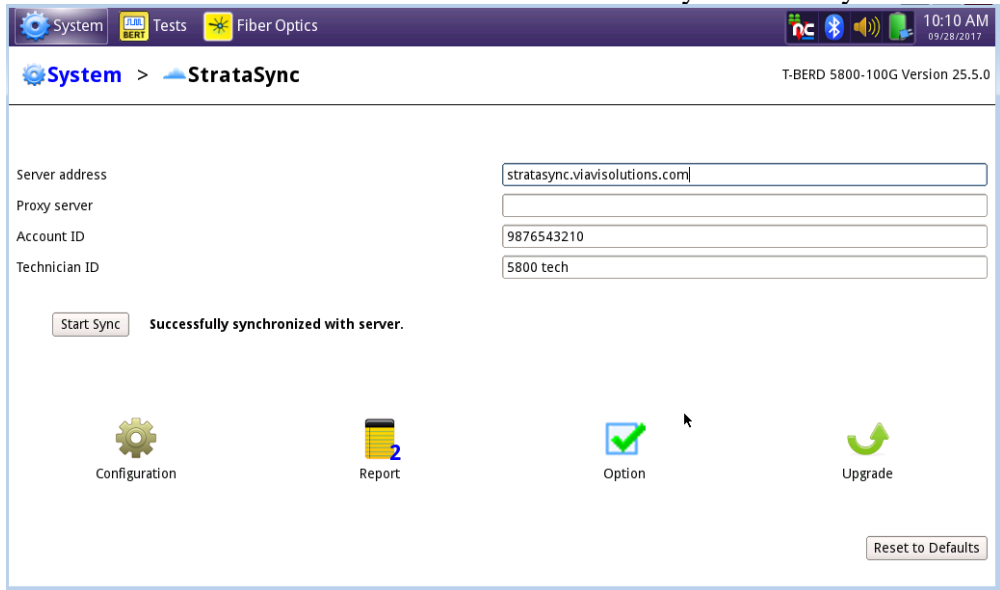

7. Sync

Press  to sync your T-BERD 5800-100G and initiate upgrades authorized by your StrataSync System Administrator. If an upgrade has been

assigned you will receive a message box telling you that an upgrade is available and prompting you to OK or Cancel. If you were expecting an upgrade notification and did not receive one during your sync to Stratasync, contact your company's Stratasync Admin.