

Quick Card

OneAdvisor ONA-800

Fiber Inspection with the P5000i Fiber Microscope

This quick card describes how to use the VIAVI P5000i Fiber Inspection Microscope to inspect a simplex fiber end face.

Equipment Requirements:

- ONA-800 with Firmware version 1.1.0 or greater
- P5000i Probe Fiber Inspection Microscope
- Bulkhead Tips and Patch Cord Tips matching the fiber under test.
- Fiber optic cleaning tools



Figure 1: Equipment Requirements

The following information is required to complete the test:

- Type of Fiber (Multimode or Single Mode)
- Type of Connectors (SC UPC, SC APC, LC UPC, etc.)
- Type of Inspection Tips (See Figure 2):
 - Standard Patch Cord Tip (FBPT-U12M, FBPT-U25M, FBPT-U25MA, etc.)
 - Standard Bulkhead tip (FBPT-SC, FBPT-SC-APC, FBPT-LC, etc.)
 - Long Reach Bulkhead Tip (FBPT-LC-L, FBPT-SC-L, etc.)
 - Angled Bulkhead Tip (FBPT-LC-A6S, FBPT-SC-A6, etc.)







INSPECTION TIP	APPLICATION
FBPT-SC	
FBPT-U25M	
FBPT-SC-APC	
FBPT-U25MA	
FBPT-LC	
FBPT-U12M	

Figure 2: Commonly Used "Standard" Inspection Tip



Figure 3: P5000i Fiber Microscope



Figure 4: ONA-800 Top View

Setting Up Pass/Fail Analysis:

1. Connect the P5000i **USB Connector** to a **USB port** on the top of the test set.
2. Connect the appropriate patch cord or bulkhead **Inspection Tip** to the P5000i Fiber Inspection Microscope by loosening and tightening the **Retaining Nut** on the P5000i Fiber Probe Barrel Assembly.

Note: Some tips connect directly to the probe, without a barrel assembly. Consult the **VIAVI Tips & Adapters Selection Guide** for more information.

3. Press the **Power Button**  to turn on the test set and display the **Favorite Screen**.
Microscope Icon

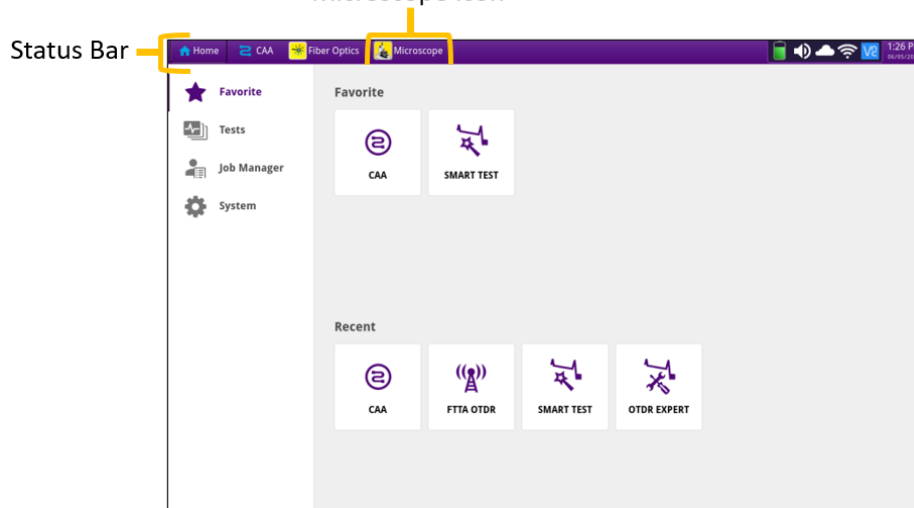



Figure 5: Favorite screen

4. Tap the **Microscope** icon  in the Status Bar at the top of the screen.
5. Using the drop-down menus at the top of the screen, select the desired profile and tip:
- Profiles:
 - **SM UPC (IEC-61300-3-35 Ed. 2.0)** for Single Mode Fiber Ultra Polished Connectors
 - **SM APC (IEC-61300-3-35 Ed. 2.0)** for Single Mode Fiber Angled Polished Connectors
 - **MM (IEC-61300-3-35 Ed. 2.0)** for Multimode Fiber
 - Tips:
 - **Standard Tips (with BAP1)** for Standard Patch Cord Inspection Tips (i.e. FBPT-U12M, FBPT-U25M, FBPT-U25MA) and Standard Bulkhead Inspection Tips (i.e. FBPT-LC, FBPT-SC, FBPT-SC-APC)
 - **Simplex Long Reach (-L) Tips** for Long Reach Inspection Tips (i.e. FBPT-LC-L, FBPT-SC-L).
 - For other types of inspection tips, connect the P5000i to FiberChekPRO™ on a PC and move the appropriate tip setting onto the probe microscope. For more information, consult the FiberChekPRO user manual. To download FiberChekPRO to your PC, visit <http://fcpro.updatemyunit.net/>.

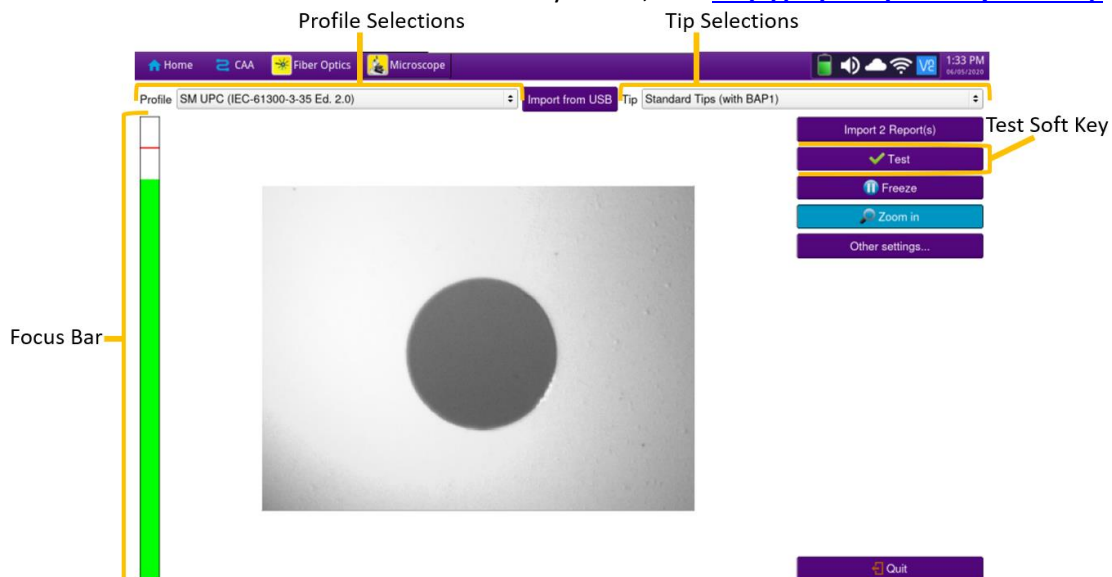




Figure 6: Live Inspection View

Runnin Pass/Fail Analysis:

1. Insert the **Bulkhead Inspection Tip** into the bulkhead or insert the Patch Cord ferrule into the **Patch Cord Inspection tip** on the P5000i Microscope Probe.
2. Adjust the **Focus Control wheel**  of the P5000i microscope to focus the optical fiber. The left vertical bar on the screen indicates the level of focus adjustment. The higher the level, the better the focus. The screen will display a line in the focus bar where the optimal focus lies for that image. Focus the image until the bar is as close to the line as possible.
3. There are 2 ways to run the fiber inspection test:
 - Press the Test button  on the microscope.
 - Press the **TEST** Soft Key on the ONA-800 touch screen.
4. If the test **fails** clean the fiber end face and **repeat steps 1 through 3**.

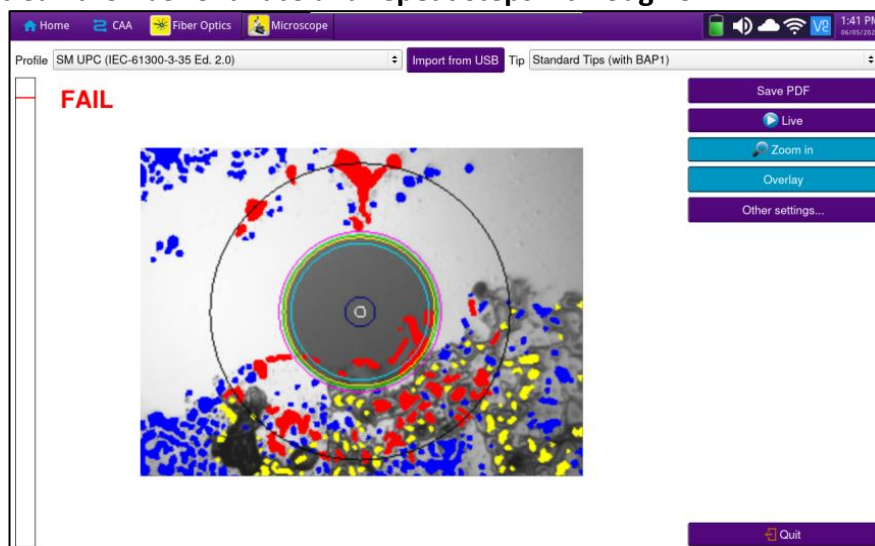


Figure 7: Failing Test

5. If the **test passes**, you are ready to **Connect**.

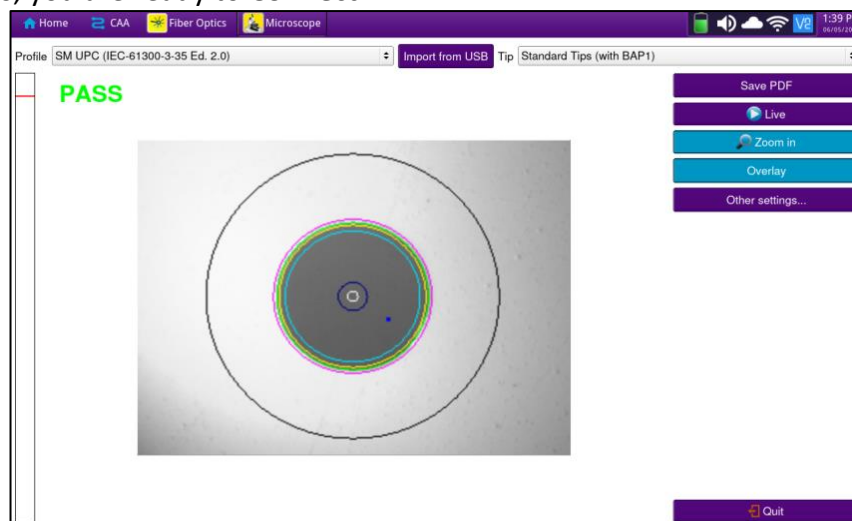


Figure 8: Passing Test

Note: Both the patch cord and bulkhead should pass inspection before connection.