
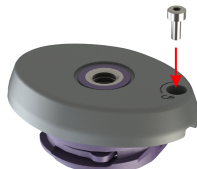
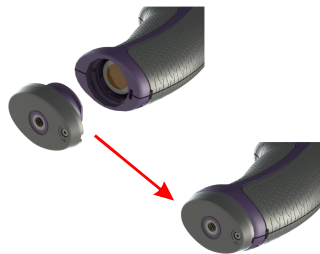



INX Battery Door with Insert Installation Instructions

What's included

- INX Battery Door with Insert
- M2x5 Screw
- 1.5 mm Hex Key
- 1-year Warranty

Installation Instructions

<p>Step 1 Power off the INX microscope, and rotate the battery door counter-clockwise to remove it.</p> <p>Note: Store the battery door in an accessible location.</p>	
<p>Step 2 Insert the M2x5 screw into the INX battery door with insert.</p>	
<p>Step 3 Mount the battery door with insert onto the microscope, and rotate it clockwise to secure it.</p>	
<p>Step 4 Set the lock on the battery door:</p> <p>Using hex key, rotate the screw away from unlock position indicated on the battery door. Do not overtighten the screw.</p> <p>Note: Store the hex key in an accessible location.</p>	
<p>Step 5 Optionally, route the lanyard through the slot.</p>	