
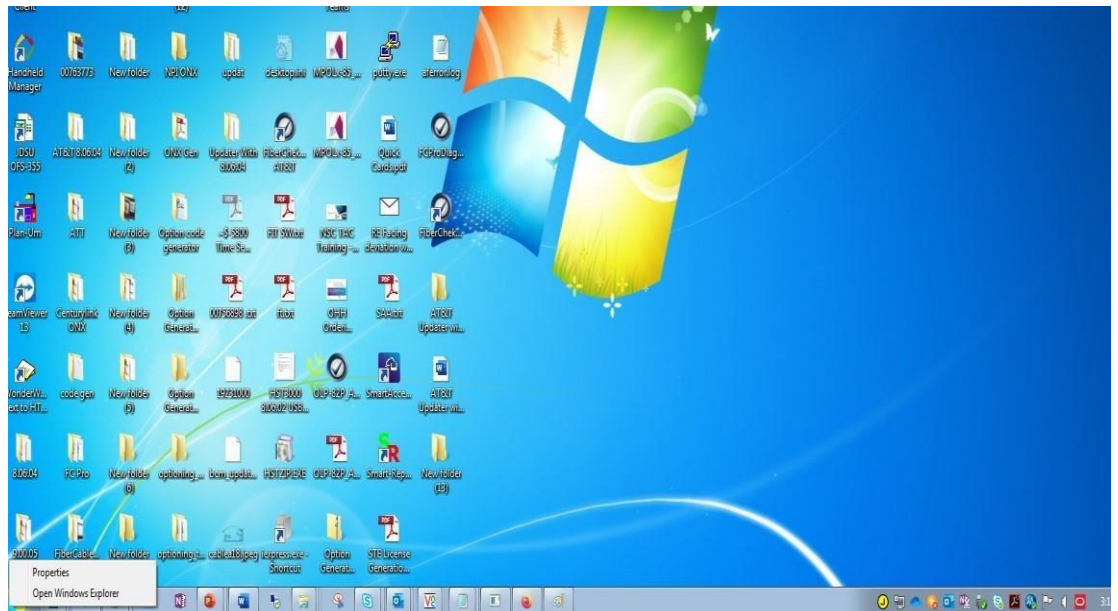


NSC-100/200 USB Upgrade instructions 4.4.5.10

Use Internet Explorer and go to our ftp server. For Windows 10 Select file Explorer and type the address below into the search window


Use Internet Explorer and go to our ftp server. Using a PC having access to the Internet, Right


1. Click on the Windows icon  and select Open Windows Explorer.
For windows 10 select File Explorer Example on next page. Note: Google Chrome and Firefox browsers will not be able to access the ftp site **Note: In the future. Access to FTP servers should be via dedicated FTP clients such as WinSCP / FileZilla.**




For windows 7 and XP Select Open Windows Explorer

NSC-100/200 USB Upgrade instructions

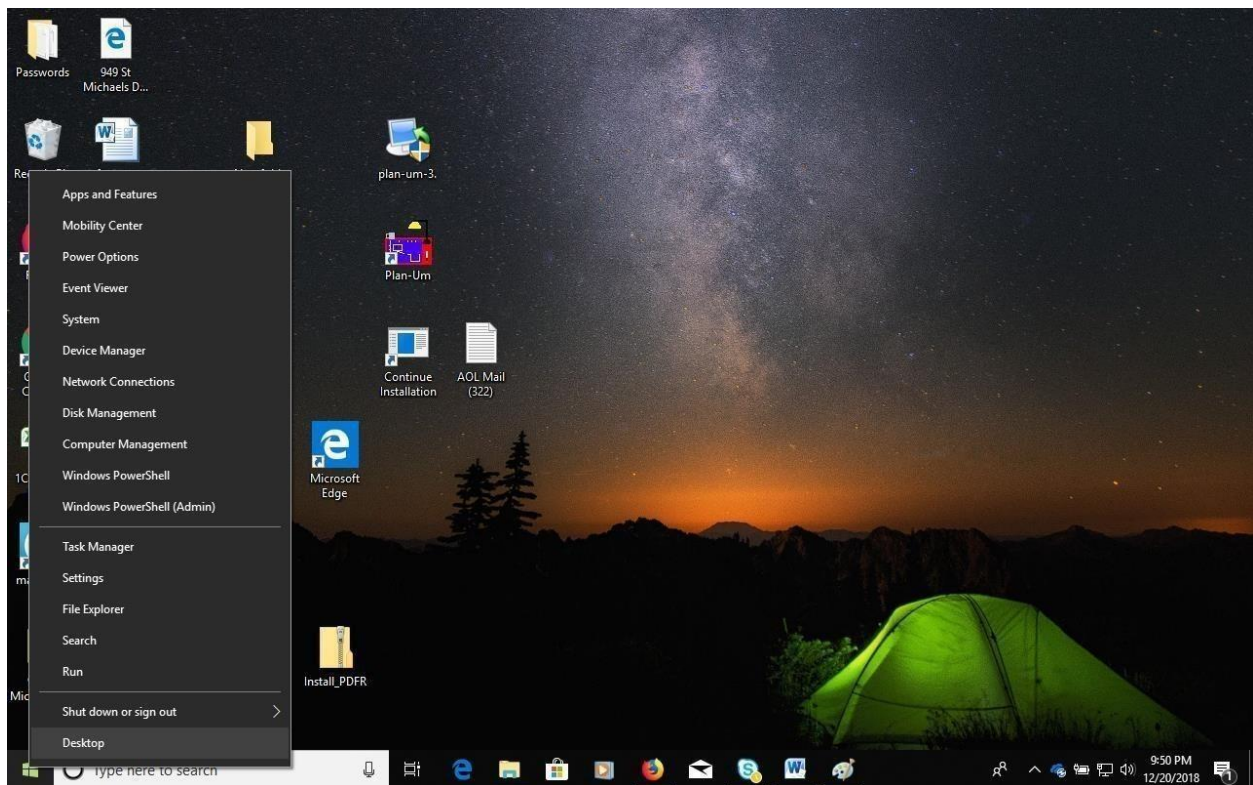


For Windows 10 Right Click on the Windows icon  and select File Explorer.

NSC-100/200 USB Upgrade instructions

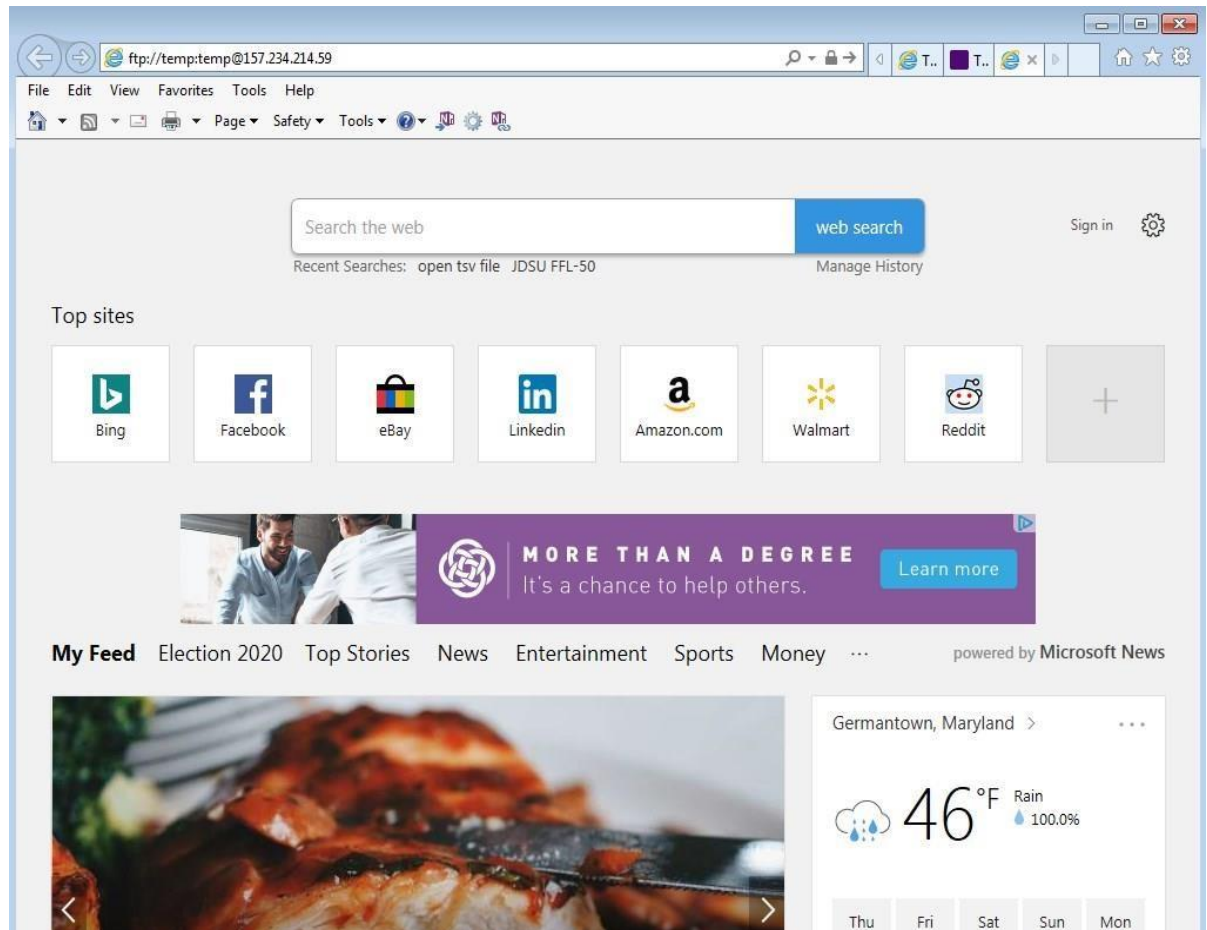


2. In the address bar type in the following ftp address:
ftp://temp:temp@157.234.214.59

NSC-100/200 USB Upgrade instructions

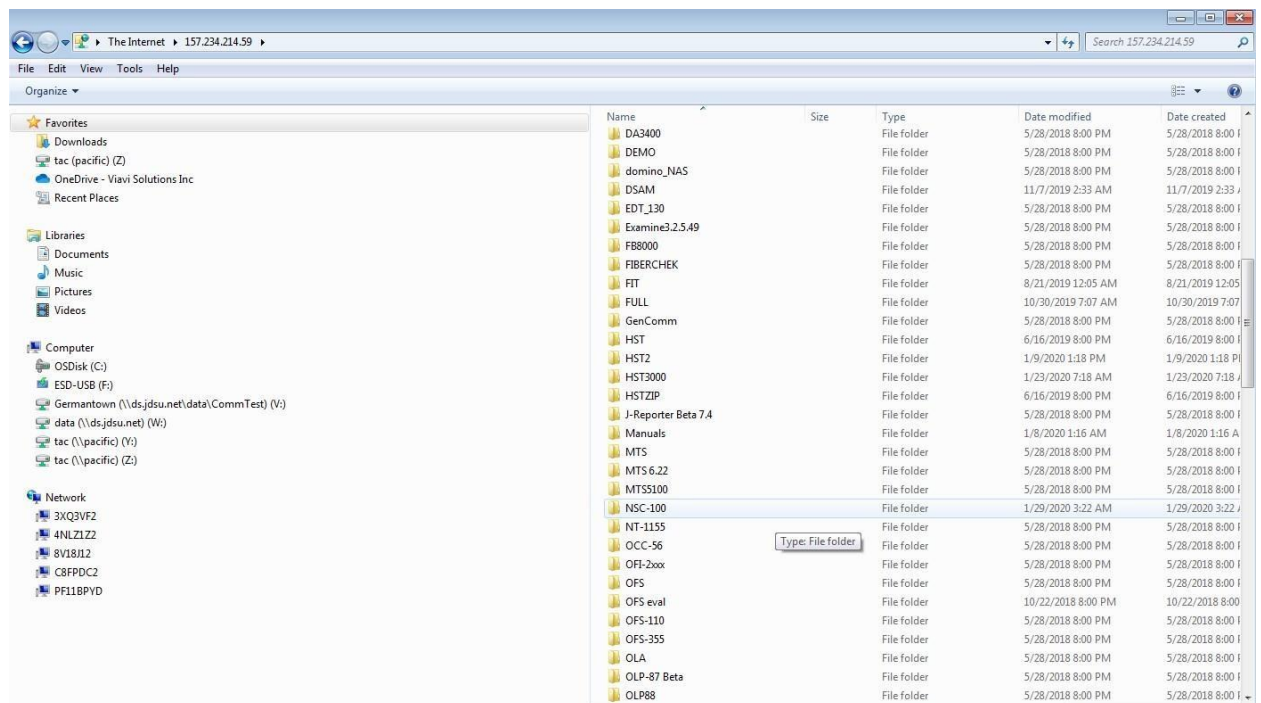

3. Look for yellow folder called NSC-100

NSC-100/200 USB Upgrade instructions

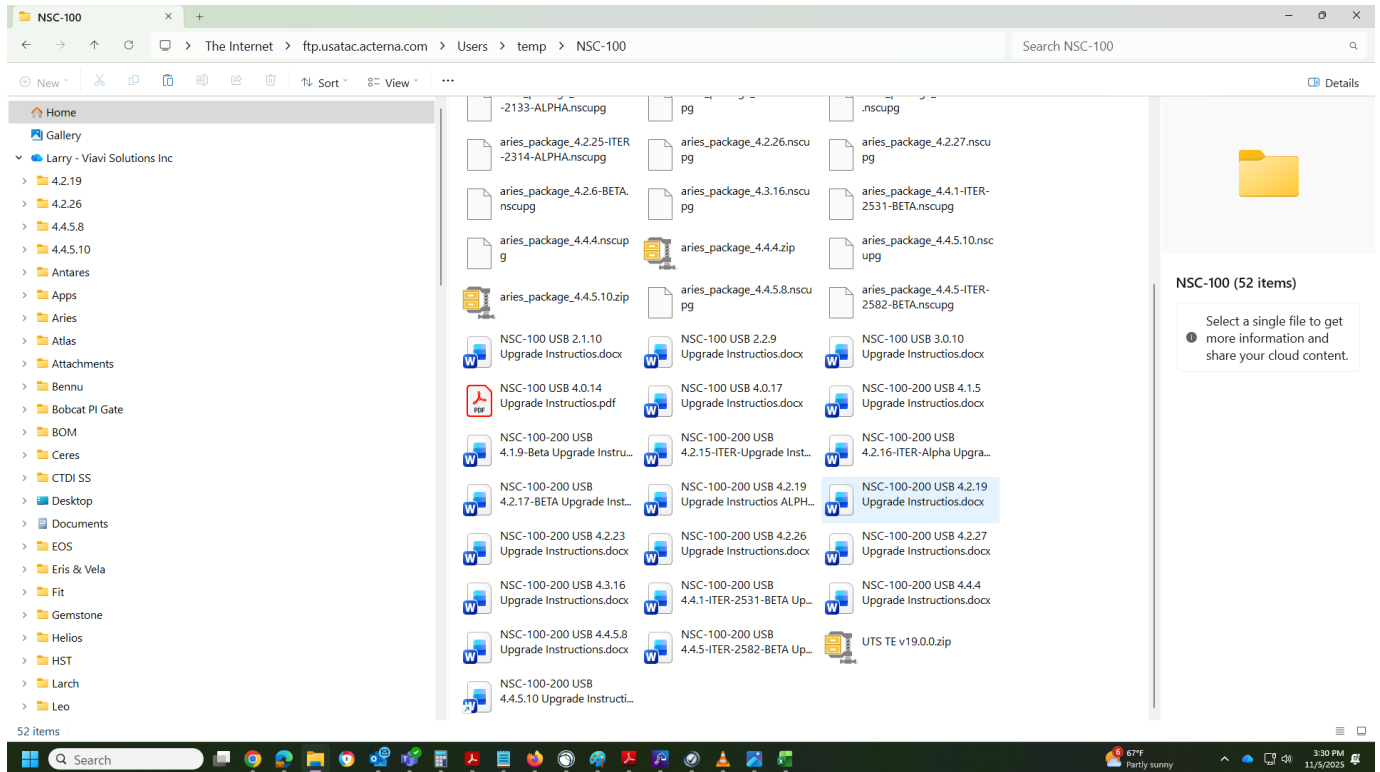

4. Open the folder and select the aries_package_4.4.5.10.nscupg

NSC-100/200 USB Upgrade instructions

5. Select Ctrl + C (to copy)
6. Insert the USB drive into your PC.
7. Navigate to My Computer and double click into the USB thumb drive.
8. Paste all copied files to the “root” of the USB thumb drive by pressing Ctrl + V.



9. Place the USB stick into the NCS-100/200
10. Turn on the NCS-100/200

LED's will flash upgrade should complete in about 45 sec