

## Quick Card

# Smart Access Anywhere™



## T-BERD/MTS-2000 Remote Operation from an iOS device

The **VIAVI Smart Access Anywhere (SAA)** app allows a user to remotely operate a SmartOTDR or T-BERD/MTS-2000 and to transfer configuration files, test reports and other data between the test set and a Personal Computer (PC), Smartphone, or Tablet. This procedure describes the steps to install and run the application on an iOS device such as an iPhone or iPad.

### Equipment Requirements:



- iPhone, iPad, or iPod Touch
- iOS 6.0 or later
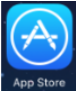
### Install Smart Access Anywhere app:

1.  Search for **Smart Access Anywhere** in the App Store.
2.  Follow prompts to install the app.



### Connect to T-BERD:

1.  Open Smart Access Anywhere by tapping the SmartAccess icon.
2. Enter the **Access Code** or **IP Address** of the test set:
  - If the test set is on a remote private network or hotspot and connected to the Smart Access Anywhere server, enter the **Access Code**.
  - If the test set is on a Public IP Address, or an IP Address in the same subnet as the iOS device, enter the test set's **IP Address**.
  - If the test set is setup as a Wireless Access Point, enter the test set's **IP Address**.
3.  Tap **Connect** to establish a connection with the test set and display the **Home Screen**.

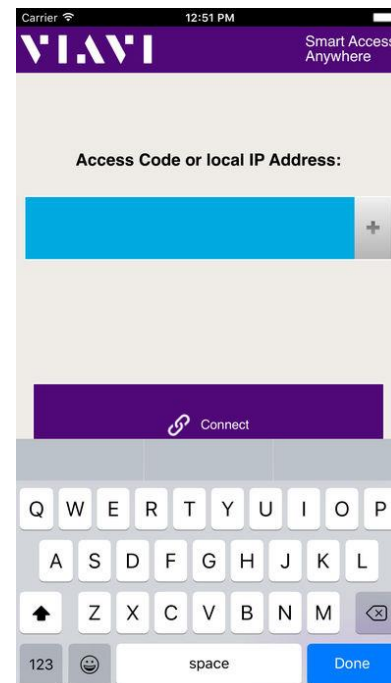





Figure 1: Connection Screen

4. From the Home Screen:

- 

Tap **Remote Screen** to view and control the test set as if you were onsite with the unit.

  - Tap on icons, softkeys, and controls as if you were tapping on the test set's touchscreen.
  - The test set's hard keys are displayed across the top of the screen.
- 

Tap **File Transfer** to download files from the test set or upload files to the test set.
- 

Tap **Disconnect** to disconnect from the test set.

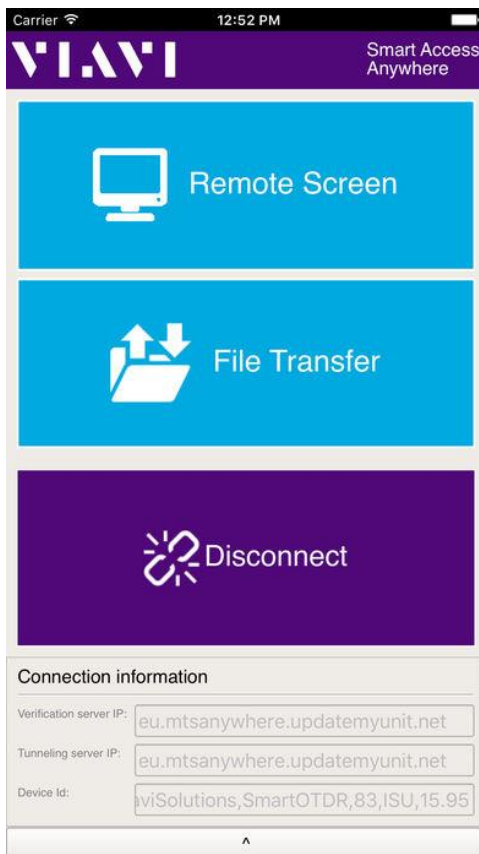


Figure 2: Home screen

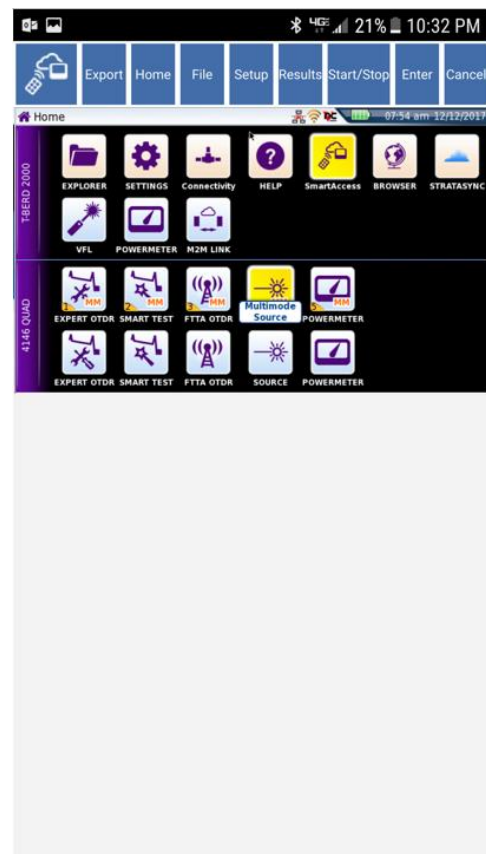


Figure 3: Remote Screen, T-BERD/MTS-2000