

Quick Card

T-BERD®/MTS 4000v2 and SmartOTDR Copying Test Results to a USB Flash Drive

This procedure describes how to copy files from a T-BERD/MTS-4000v2 to a USB flash drive.

Equipment Requirements:

- T-BERD/MTS-4000v2
- 4GB to 16GB USB Flash Drive



Figure 1. Equipment Requirements

Save OTDR Traces:

Save your test results to the T-BERD's hard disk drive.

- In the Smart Test Assistant, the **Save directory** is the Job Id specified the Recording Information screen that is displayed after tapping the **Save** softkey.

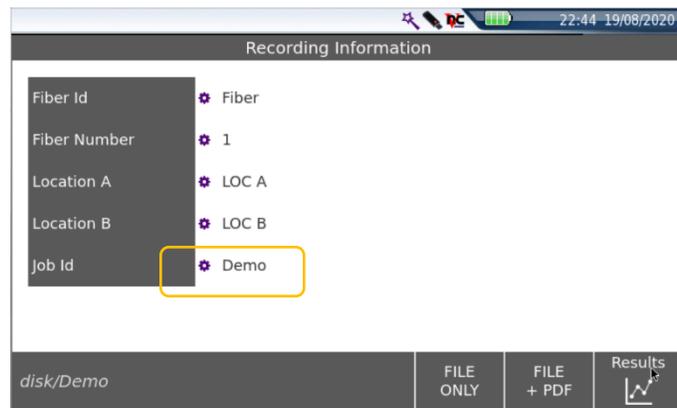


Figure 2: Smart Test Assistant, Save Menu

- For Expert OTDR, the **Save directory** is created and/or selected in the File Explorer. The directory should be selected before saving results.

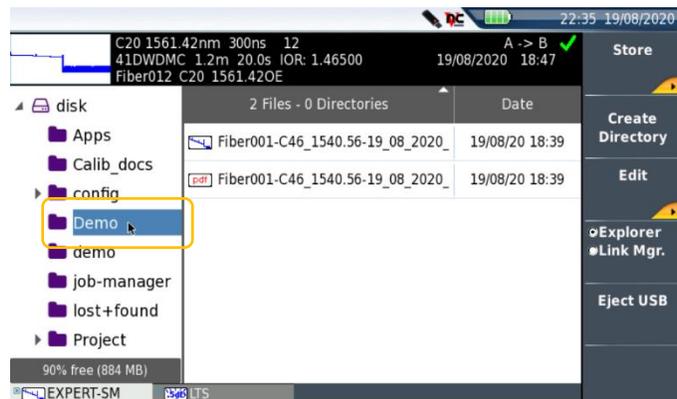


Figure 3: File Explorer

Insert USB flash drive:

Insert the USB Flash Drive into a USB port on the top of the T-BERD/MTS-4000v2 test set.



Figure 4; T-BERD 4000v2, Top View

Format USB Flash Drive before first use:

1. Tap the **SETTINGS** icon  in the **Home Screen** to access **System Settings**.



Figure 5: T-BERD/MTS-4000v2 Home Screen

2. Tap the **Expert Tools** soft key .

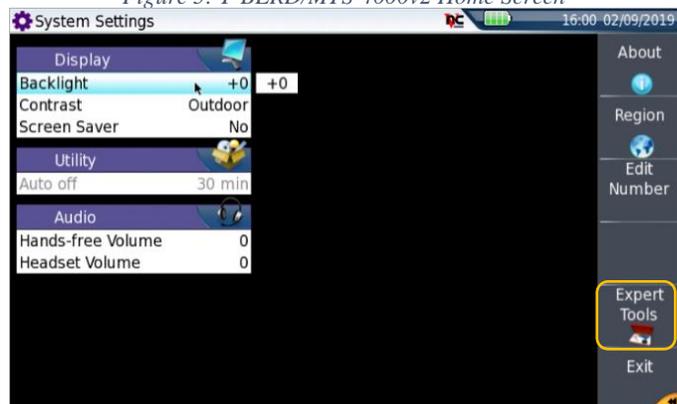
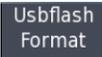


Figure 6: System Settings

3. Tap  to display USB soft keys.

4. Tap the **Usbflash Format** soft key  and  to format the USB Flash Drive.

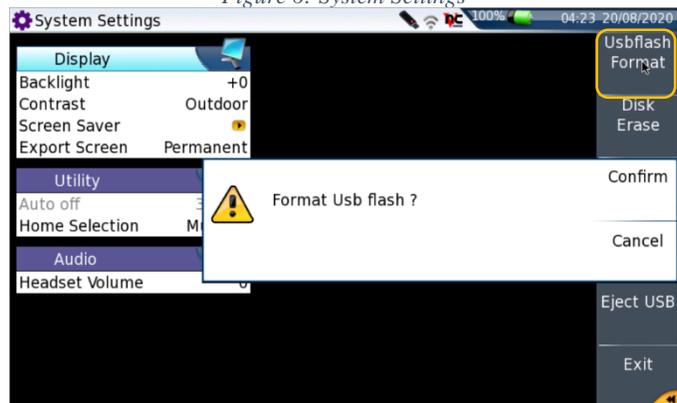


Figure 7: System Settings, Media Utilities

Copy files to the USB Flash Drive:

1. Press the FILE/SETUP/RESULTS Function



2. Tap the **File** soft key 

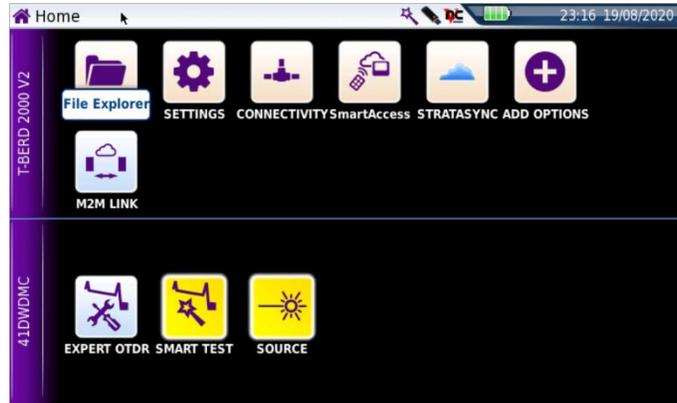


Figure 8: Home Screen

1. In the **File Explorer**, select the file(s) to be transferred.

2. Tap the **Edit** soft key 



Figure 9: File Explorer, disk drive

3. Tap the **Copy** soft key 

4. Select the **usbflash** drive 

5. Tap the **Paste** soft key 

6. Tap the **Exit** soft key 

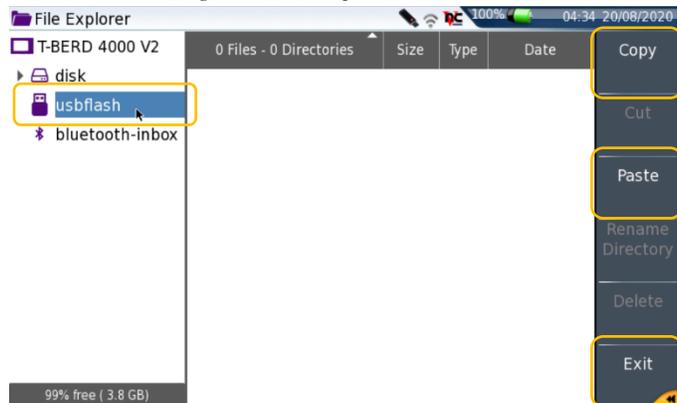


Figure 10: File Explorer, usbflash drive

Eject USB flash drive:

Tap the Eject USB soft key  and remove the USB Flash Drive from the USB port of the test set.

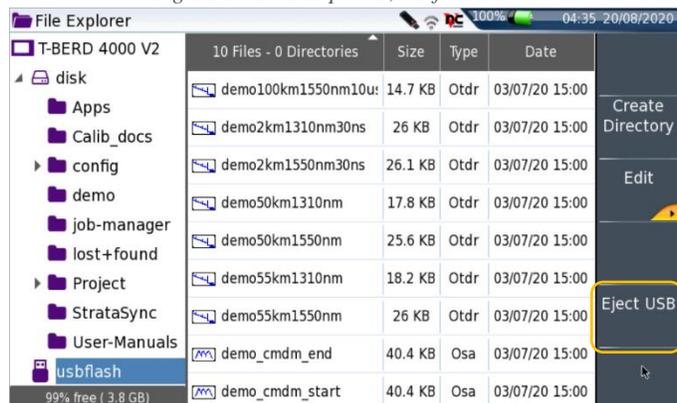


Figure 11: Eject USB