

Quick Card

T-BERD[®]/MTS-4000v2 Modular Test Set Updating Software via USB

This quick card describes how to upgrade the T-BERD/MTS-4000v2 software using a USB Flash Drive.








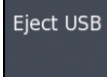
Equipment Requirements:

- Laptop or Personal Computer (PC) with Internet Access
 - 4GB to 16GB USB Flash Drive.
- Note: The USB Flash Drive will be erased. Please backup any needed files, prior to use.**



Figure 1: Equipment Requirements

Format USB Flash Drive:

1. Press the Power button  to turn on the test set.
2. Press the Home icon  to display the Home Screen.
3. Tap the **SETTINGS** icon  to access **System Settings**.
4. Insert the USB Flash Drive into a USB port on the top of the T-BERD/MTS-4000v2 test set.
5. Tap the **Expert Tools** softkey .
6. Tap  to display USB softkeys.
7. Tap the **Usbflash Format** softkey  and tap  to format the USB Flash Drive.
8. Tap the **Eject USB** softkey  and remove the formatted USB Flash Drive from the USB port of the test set.

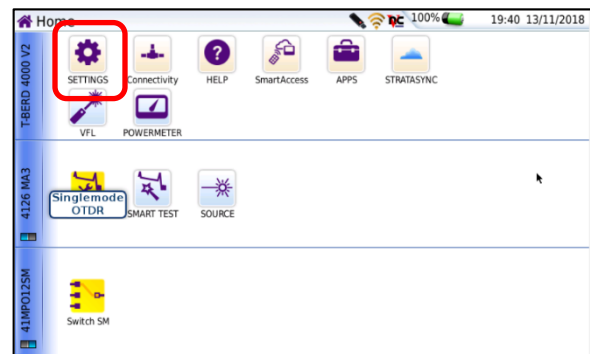


Figure 2: T-BERD/MTS-4000v2 Home Screen

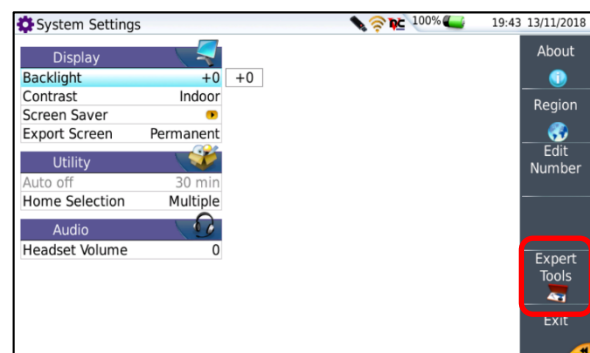


Figure 3: System Settings

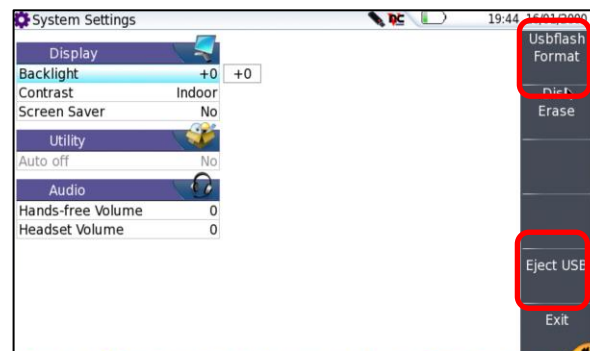


Figure 4: System Settings, Media Utilities

Download archive and extract to USB Flash Drive:

1. Insert the formatted USB Flash Drive into a USB port on the Laptop or PC.
2. On the Laptop or PC, open the Internet browser and navigate to the T-BERD/MTS-4000v2 software update portal: <http://4kv2.updatemyunit.net/>.

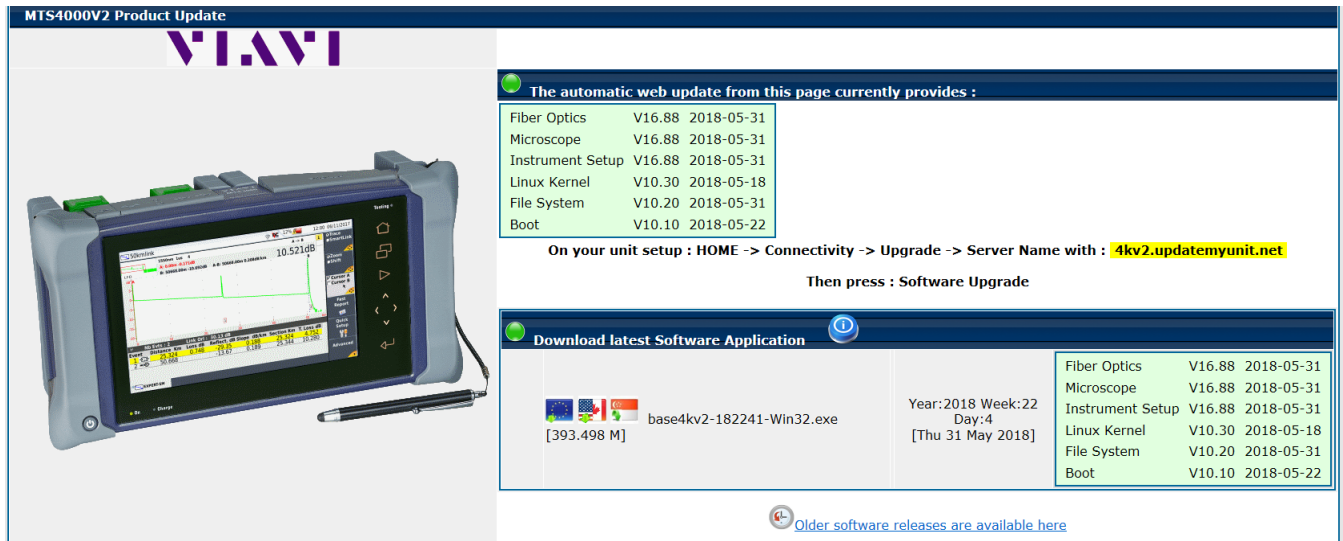





Figure 5: Updatemyunit.net Software Update Portal

3. Click on a Flag icon to download and run platform software from the nearest server:
 -  European Server
 -  North America Server
 -  Singapore Server
4. Enter or browse to the path of the USB Stick and press the **OK** button to extract files to the USB Flash Drive.

Note: Do not save the downloaded file directly to the USB Drive. The file is compressed and must be run and extracted.
5. Eject and remove the USB Flash Drive from the Laptop or Personal Computer.

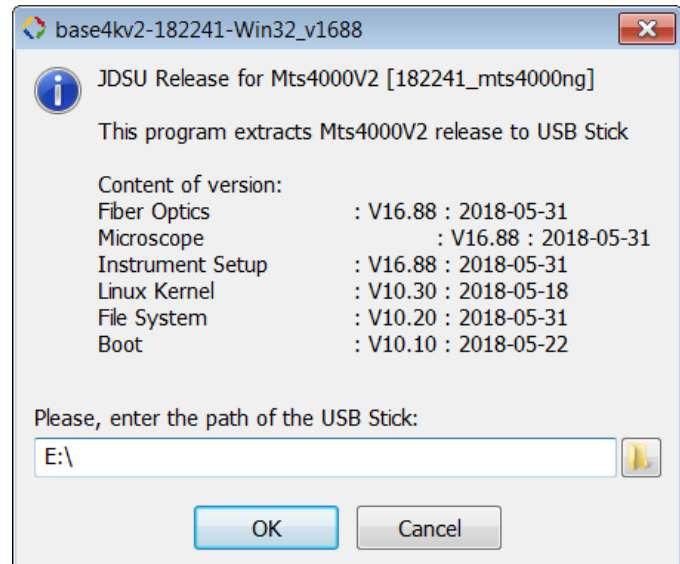





Figure 6: Extracting the Software

Upgrade Test Set:

1. Insert the USB Flash Drive into a USB port on the top of the T-BERD/MTS test set.
2. Plug the T-BERD/MTS test set into AC power. You cannot update the software while running on battery.
3. Press the **Home** icon  to display the Home Screen.
4. Tap the **Connectivity** icon  in the **Home Screen**.
5. Tap the **UPGRADE** Icon  to show the Software Upgrade screen.


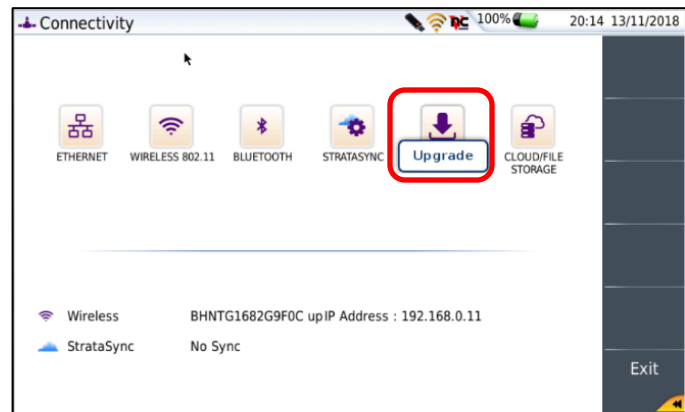


Figure 7: Connectivity Screen

6. Tap the **Software Upgrade** soft key



7. Tap the **Upgrade from USB** soft key

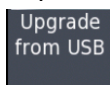

8. Tap **Confirm**.



9. Tap the **Confirm this Choice** soft key



10. Follow screen prompts to complete the software upgrade. Do not touch the test set, remove the USB, or unplug power until the upgrade is complete. It will auto reboot twice during the upgrade process and display the Home Screen when the upgrade is complete.

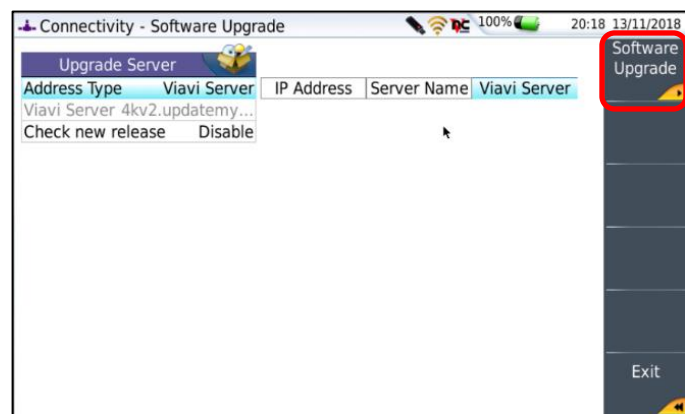


Figure 8: Software Upgrade Screen

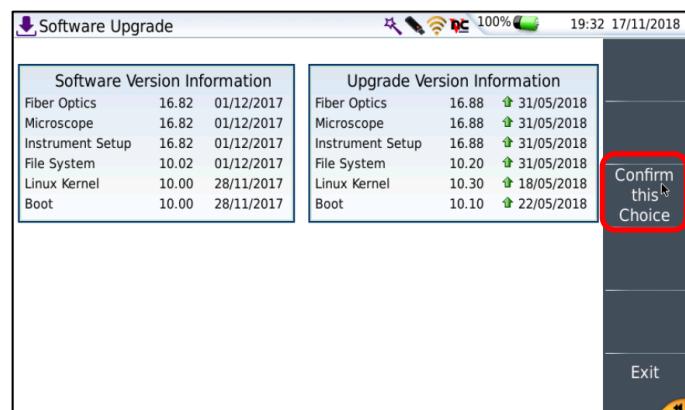


Figure 9: Upgrade Version Information