



QUICK CARD

Using the Android Mobile Tech App

This quick card outlines how to use the Mobile Tech App (MTA) on an Android smartphone or tablet to download and email test reports.




ENABLE BLUETOOTH ON THE T-BERD 5800

1. Tap the System icon at the top of the screen
2. Tap the Bluetooth Icon
3. Check "Enable Bluetooth"
4. Check "Allow other devices"

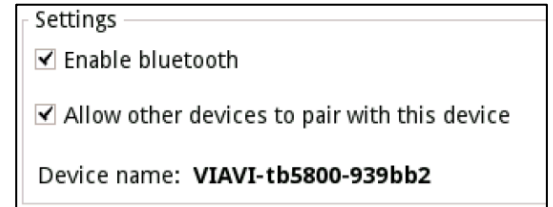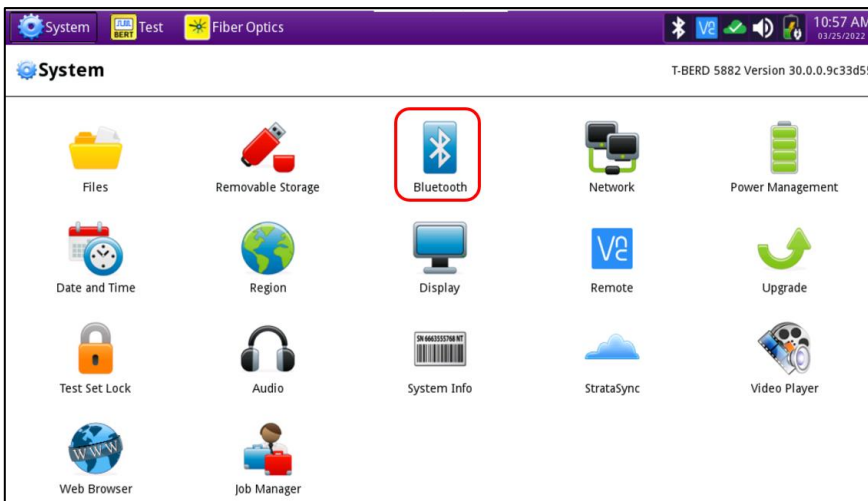

LAUNCH THE MOBILE TECH APP ON ANDROID



1. From the Google Play Store, search for "Viavi".
2. Install and Open the Viavi **Mobile Tech** app.
3. Select **[LOCAL MODE]**.

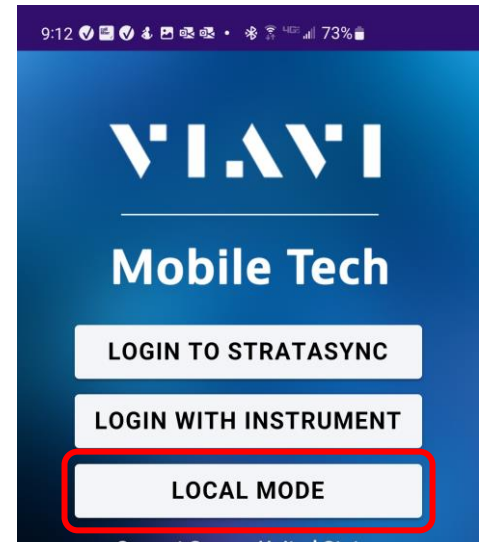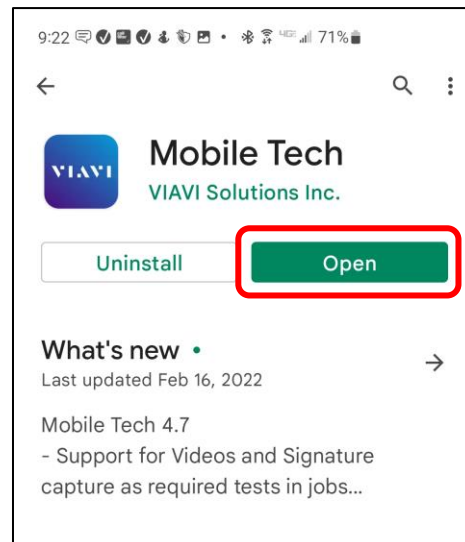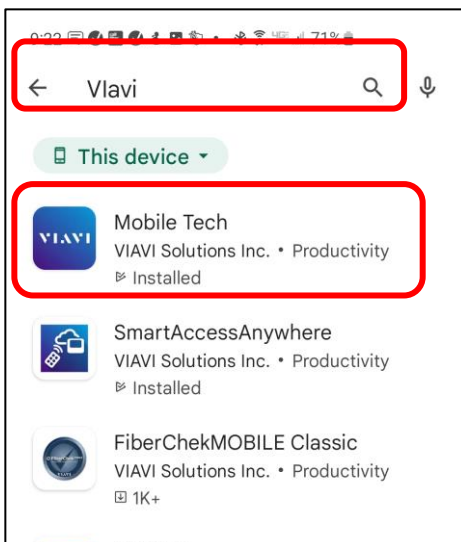

QUICK CARD


PAIR ANDROID WITH T-BERD 5800

1. In the Mobile Tech app, the T-BERD 5800 appears under “Other Devices”
2. Press [**CONNECT**] and select “Pair” from MTA app.
3. Select “Pair” on the T-BERD 5800.

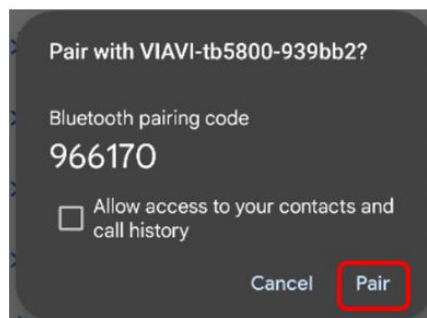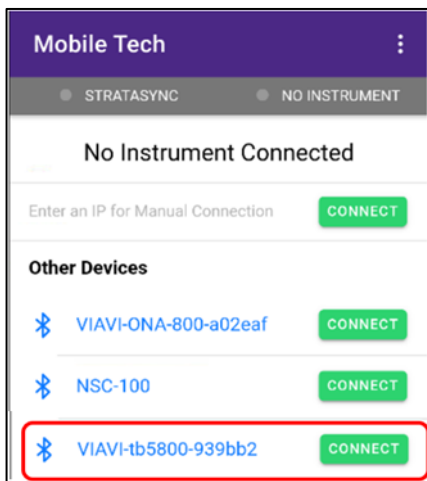

DOWNLOAD REPORT(S) FROM THE T-BERD

4. Press the **T-BERD58xx Files** button.

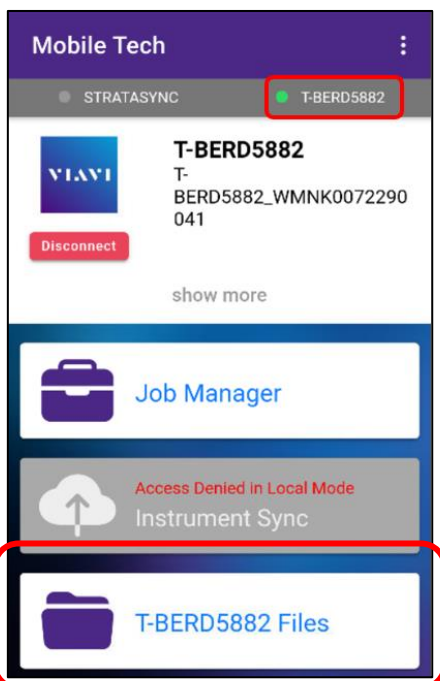

5. Select the “bert” folder.




6. Select the “tests” subfolder.



7. Press a down-arrow to download the test report.




8. A green checkmark indicates the file has been downloaded.

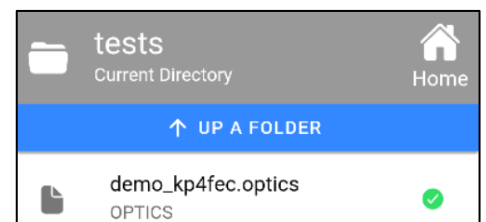


QUICK CARD


EMAIL THE TEST REPORT


1. To email a file from the Mobile Tech app, press **<Back>** to return to main menu.




2. Press [**Mobile Tech Files**] to view downloaded files.

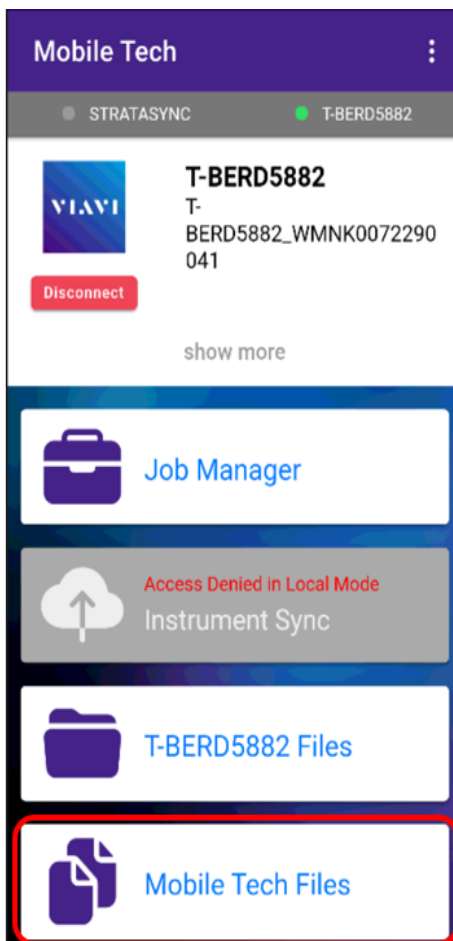


3. Press the up-arrow  next to the desired file.

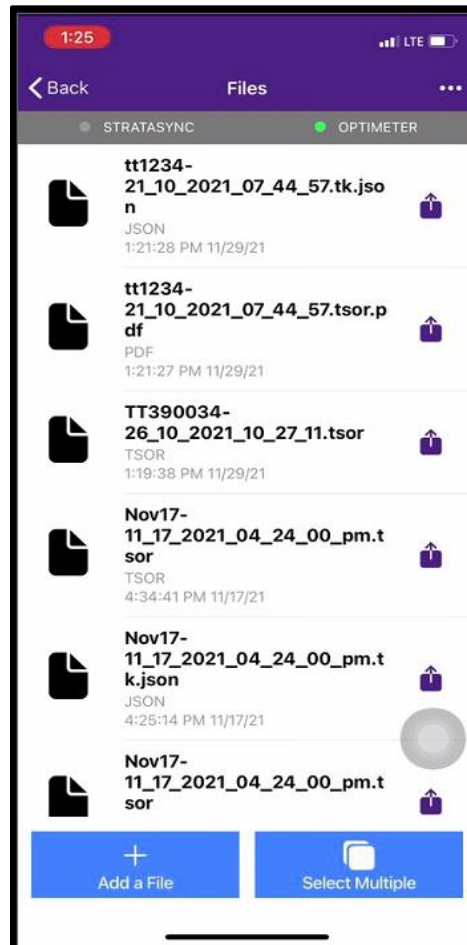

4. In pop-up, choose [**Export to another app**]

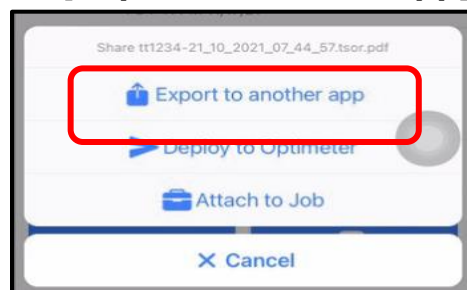

5. Select preferred method to send file: email, text, etc.

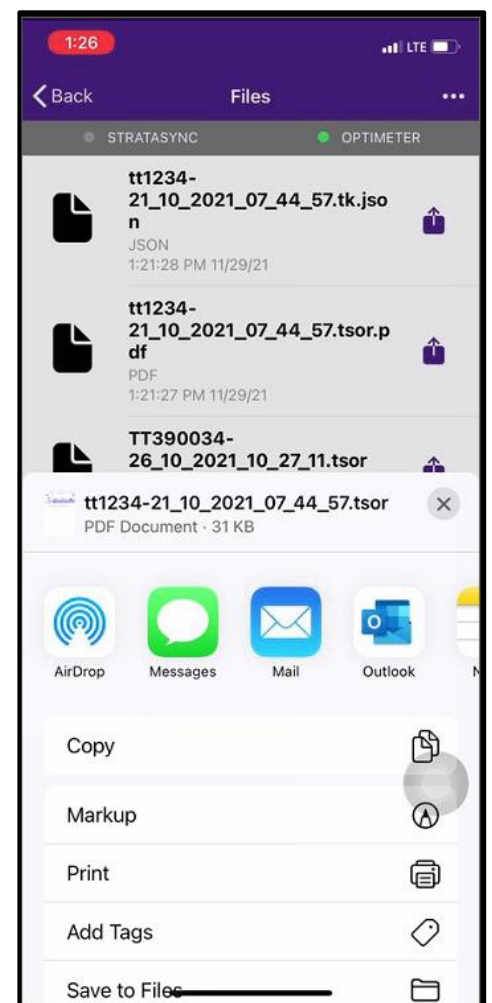

6. Send the file using the selected application.