

Quick Card

P5000i Fiber Microscope Updating firmware with FiberChekPRO™


This quick card describes how to update the P5000i Fiber Microscope to the latest software revision using VIAVI FiberChekPRO software.

Equipment Requirements:

- P5000i Fiber Inspection Microscope
- Personal Computer (PC) or Laptop
- FiberChekPRO Software version 2.1 or greater (download at <http://fcpro.updatemyunit.net/>)



Firmware Update Instructions:

1. Connect the P5000i USB Connector to a USB port on your laptop or PC.
2. Click the **FiberChekPRO** icon  in the Windows® Start menu on your PC or laptop to launch FiberChekPRO.
3. The **FiberChekPRO** software will identify the connected P5000i device. If new firmware is available, a window will be displayed with instructions to perform the update. Press the **OK** button.

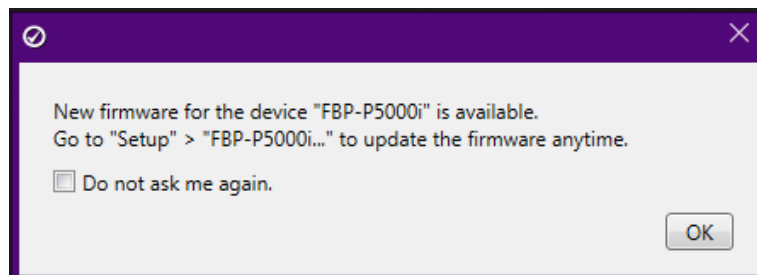


Figure 1: New firmware prompt.

4. Click the **"Setup"** option in the upper right corner of the screen and select the second option, **FBP-P5000i**.

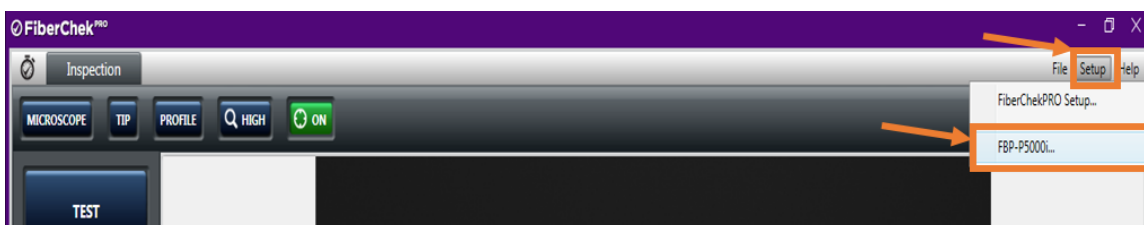


Figure 2: FiberChek PRO Setup menu

5. The **FBP-P5000i Setup** screen will be displayed. Select the **Firmware** option and click on the **"Update Firmware..."** button.

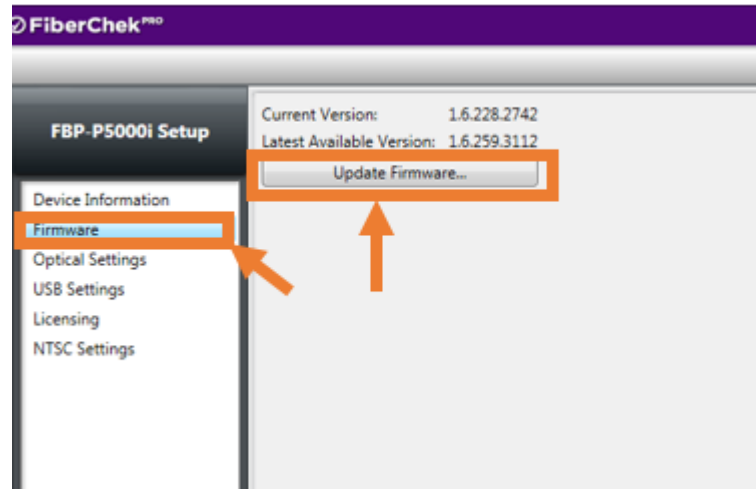


Figure 3: FBP-P5000i Setup

6. A window will be displayed indicating that the firmware update process was started.

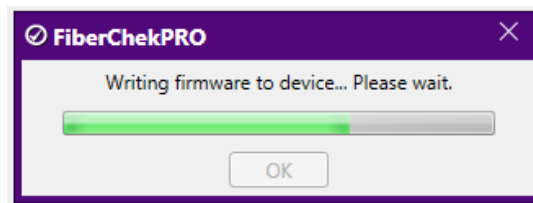


Figure 4: Update process started

7. After a few seconds, a window will be displayed with instructions to complete the update.

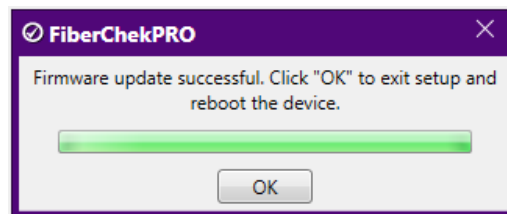


Figure 5: Firmware update successful.

8. Click **OK** to complete the update and reboot the P5000i.
9. **The P5000i is ready to be used with the latest firmware revision.**