OneAdvisor 800 Platform



QUICK CARD

Adding Software Licenses via USB

This quick card outlines how to apply newly purchased software options using a USB Flash Drive.

EQUIPMENT REQUIREMENTS

Equipment Requirements:

- Laptop or Personal Computer with email access
- 4GB to 16GB USB Flash Drive



Figure 1: Equipment Requirements

FORMAT USB FLASH DRIVE (OPTIONAL)

- Press the Power button on the top panel to turn on the OneAdvisor.
- 2. Insert the USB Flash Drive into a USB port under the flap on the top panel of the OneAdvisor 800
- 3. Tap home to display the Home Screen.
- 4. Tap system to display the System menu.
- 5. Tap the **Removable Storage** Icon to show the Removeable Storage menu.
- 6. Tap Format to format the USB Flash Drive.
- 7. Tap and remove the USB Flash Drive from the USB port of the test set.

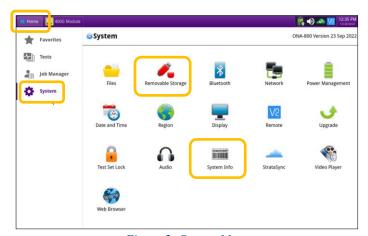


Figure 2: System Menu

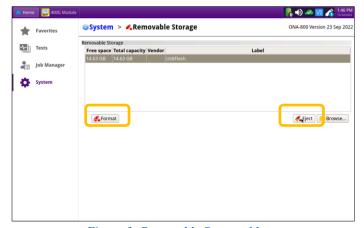


Figure 3: Removable Storage Menu

OneAdvisor 800 Platform



QUICK CARD

TRANSFER OPTIONS FILE TO USB FLASH DRIVE

You probably received the **options file** via email. The file needed is "**options.json**". Confirm that the Serial Number of your OneAdvisor-800 matches what is shown in the "**Asset Unique Id**" in the email.

- Insert the formatted USB flash drive into your Laptop or Personal Computer.
- 2. Transfer that file to a USB Flash Drive.
- 3. Eject the USB Flash Drive from your computer.

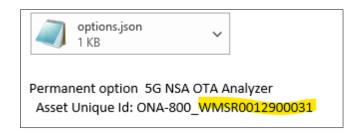


Figure 4: Options file

IMPORT OPTIONS

- 1. Press the Power button on the top panel to turn on the OneAdvisor.
- 2. Insert the USB Flash Drive into a USB port under the flap on the top panel of the OneAdvisor.
- 3. Tap 1 Home to display the Home Screen.
- 4. Tap system to display the System menu. (see Figure 2)
- 5. Tap the **System Info** Icon.
- 6. Tap Import Options to open the import options screen.
- 7. Select USB flash ■usb_flash_sda1 ‡
- Select the **Options.json** file and tap **Open**.
 This will install the licenses contained in the file.
- Restart the OneAdvisor.
- 10. Return to the **System Info** screen.



 Check for green check marks next to the newly installed licenses.

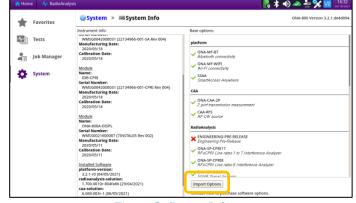


Figure 5: System Info

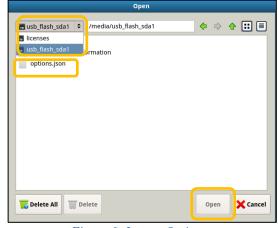


Figure 6: Import Options

+1 844 GO VIAVI (+1 844 468-4284)

To reach the VIAVI office nearest you, visit viavisolutions.com/contact