

## Quick Card

# T-BERD<sup>®</sup>/MTS-5800 Network Tester

## Ethernet Layer 2 Traffic Generation

This document outlines how to set the T-BERD/MTS 5800 up as a Layer 2 Traffic Generator and measure MetroEthernet key performance indicators (KPIs).

### Equipment Requirements:

- T-BERD/MTS-5800 equipped with the following:
  - BERT software release V28.1 or greater
  - Ethernet test options:
    - C510M1GE for 10/100 Megabit or 1 Gigabit Ethernet
    - C510GELAN for 10 Gigabit Ethernet
    - C525GELAN for 25 Gigabit Ethernet
    - C540GELAN for 40 Gigabit Ethernet
    - C5100GELAN for 100 Gigabit Ethernet
  - SFP, QSFP, or CFP4 optical transceiver to match the line under test
- Patch Cables to match the optical transceiver and line under test (CAT5E, Single mode or Multimode Fiber)
- Fiber optic inspection microscope (VIAVI P5000i or FiberChek Probe)
- Fiber Optic Cleaning supplies



Figure 1: Equipment Requirements

### The following information is required to complete the test:

- Physical Interface (10/100/1000BASE-T, 1000BASE-SX, 1000BASE-LX, 10GBASE-LR, 25GBASE-SR, 40GBASE-SR4, 100GBASE-LR4, etc.)
- Auto Negotiation settings of the port under test.

### Fiber Inspection Guidelines:

- All fiber end-faces must be clean and pass an inspection test prior to connection.
- Use the VIAVI P5000i, FiberChek Probe, or Sidewinder microscope to inspect both sides of every connection being used (SFP/QSFP Port, bulkhead connectors, patch cables, etc.)

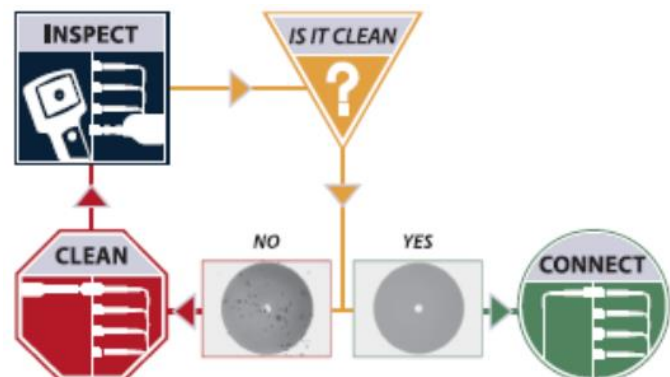


Figure 2: Inspect Before You Connect

### Connect to Fiber Under Test (FUT):

- For copper 10/100/1000BASE-T interface testing with the T-BERD/MTS 5800v2, connect the Port 1 10/100/1000 RJ-45 jack to the port under test using CAT 5E or better cable.
- For copper 10/100/1000BASE-T interface testing with the T-BERD/MTS 5800-100G, insert a copper SFP into the Port 1 SFP+/SFP28 slot and connect to the port under test using CAT 5E or better cable.
- For optical interfaces:
  - Insert desired SFP, QSFP, or CFP4 into the Port 1 slot on the top of T-BERD.
  - Inspect and, if necessary, clean all SFPs, fibers, and bulkheads, as described on page 1.
  - Connect the SFP, QSFP, or CFP4 to the port under test using a Single Mode or Multimode jumper cable compatible with the interface under test.

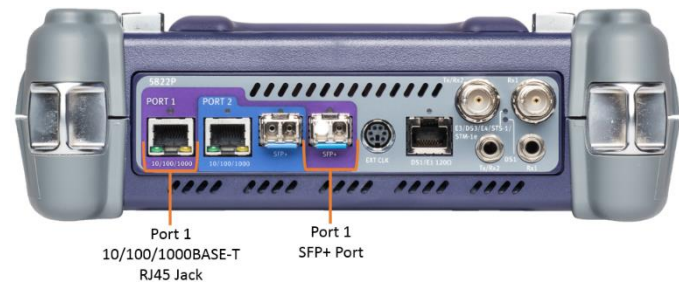


Figure 3: T-BERD 5800v2

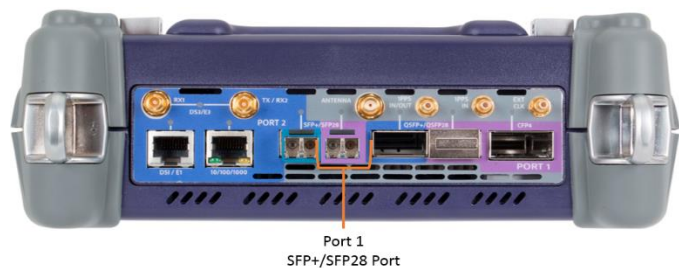







Figure 4: T-BERD 5800-100G

### Launch and Configure Test:

- Press the Power button  to turn on the test set and view the startup screen.
- Using the **Select Test** menu, **Quick Launch** menu, or **Job Manager**, launch an **Ethernet, Layer 2 Traffic, Terminate** test on port 1 for the desired physical interface. For example:  
**Ethernet ▶ 10/100/1000 ▶ Layer 2 Traffic ▶ P1 Terminate.**
- If the test is not in the default settings, tap the **Tools icon** , and select **Reset Test to Defaults** . Press **OK**  to continue and wait for test to reconfigure.
- Press the **Setup** Soft Key,  to display the **Interface** settings tab. If you are testing a **10/100/1000** Electrical or **1GigE** Optical tests with auto negotiation disabled, select the **Physical Layer** tab and configure settings to match the Ethernet port under test.

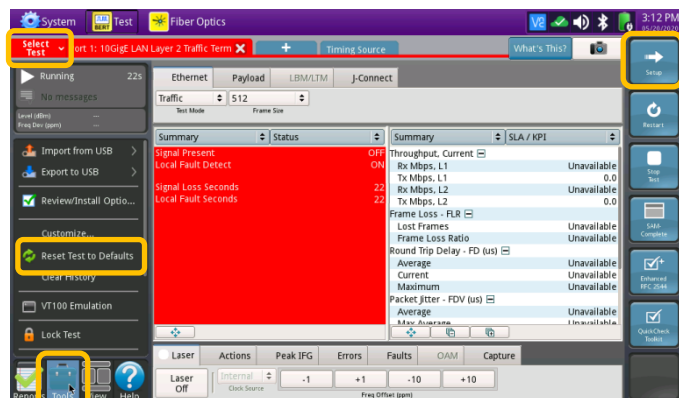


Figure 5: Ethernet, 1 GigE Optical, Layer 2 Traffic, Terminate test

5. Select the **Ethernet** settings tab.
  - a. If you are testing a VLAN, set **Encapsulation** to **VLAN**, tap the **VLAN** field and enter your **VLAN ID**.
  - b. If you are testing head-to-head with another T-BERD/MTS, tap the **SA** field to display the Factory Default Source MAC Address of your T-BERD. Provide this address to the operator of the other T-BERD/MTS, upon request.
  - c. If you wish to measure Bit Error Rate, tap the **Data** field, and set **Acterna Payload** to **BERT**.

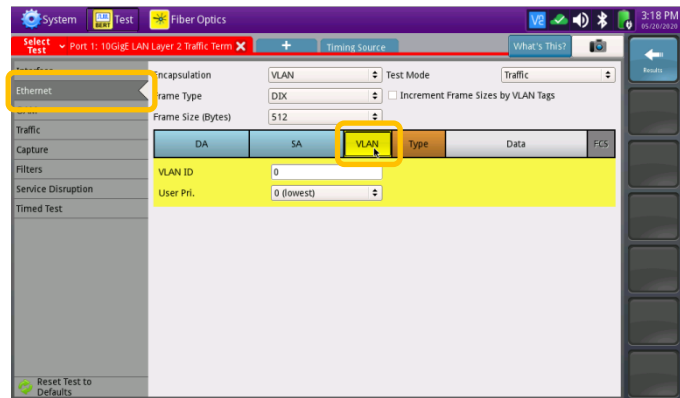


Figure 6: Ethernet settings

6. Select the **Traffic** settings tab. Set **Load Unit** to **Bit Rate** and set **Load** to the desired traffic rate or Committed Information Rate (CIR).

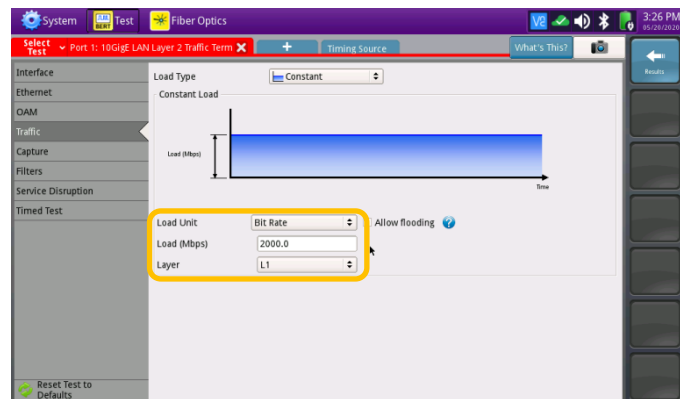







Figure 7: Traffic Settings

7. Press the **Results** Soft Key, , to view the Results screen.
8. For **1GigE**, **10GigE**, **25GigE**, **40GigE**, or **100GigE** optical tests, select the **Laser** tab in the **Action panel** at the bottom of the screen, and press . The button will turn yellow and be relabeled .
9. Press the **Restart** Soft Key , on the right side of the screen.
10. A green **Signal Present** LED  indicates the T-BERD/MTS is receiving an optical signal from the port under test. Green **Sync Acquired** and **Link Active** LEDs indicate that the T-BERD/MTS has successfully connected to the port under test and the link is active.


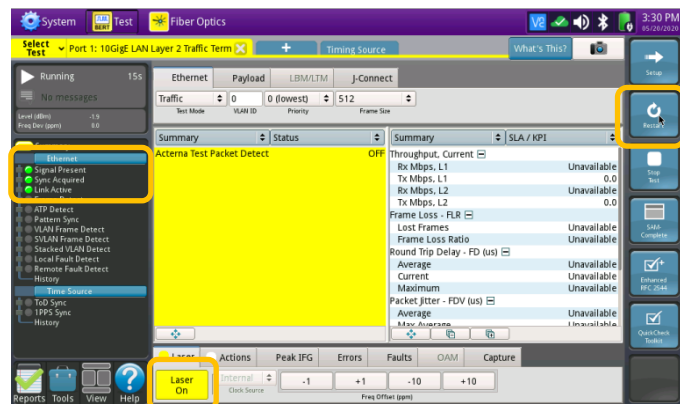


Figure 8: Results

11. Select the **Actions** tab in the **Actions Panel**.  
If you are testing head-to-head, to a hard loop, or if the loopback device is already in Local Loop Back (LLB) mode, proceed to step 12. Otherwise, If the Loopback device is a T-BERD/MTS or another VIAVI

compatible loopback device, press



to loop up the far end device.

12. Press



The button will turn yellow and be relabeled



13. Press the **Restart** Soft Key



on the right side of the screen. Verify that:

- The Right Results window shows “Rx Mbps, L1” is approximately equal to the Committed Information Rate
- The Right Results window shows Lost Frames = 0.

14. Allow the Test to run for the desired duration. Verify that the Left Result window displays “**ALL SUMMARY RESULTS OK**” throughout the test.

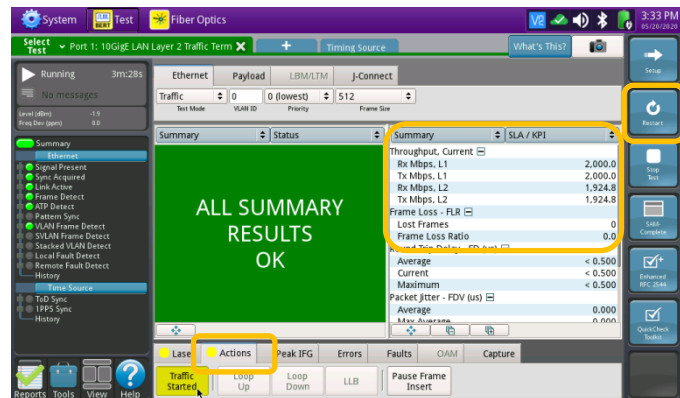


Figure 9: Traffic Started