

Quick Card

ONA-800 Platform

E4100-series OTDR SMART TEST ASSISTANT

This quick card describes how to connect to a fiber under test, configure **SMART TEST** OTDR settings, run tests, and analyze results with a VIAVI ONA-800 and the 4100-series OTDR module.

Equipment Requirements:

- ONA-800 equipped with the following:
 - Fiber Optics Software Release V18.94 or greater
 - E4100 Series OTDR Module
- Fiber optic cleaning and inspection tools
- Launch Cable (minimum 20-meter Fiber optic patch cable) with connectors matching the OTDR port and Fiber Under Test
- Optical Coupler to connect Launch Cable to Fiber Under Test



Figure 1: Equipment Requirements

The following information is required to complete the test:

- Type of Fiber (Multimode or Single Mode)
- Type of Connectors (SC UPC, SC APC, LC UPC, etc.)
- Distance unit (feet, meters, miles, kilometers)

Fiber Inspection Guidelines:

- Use the VIAVI P5000i or FiberChek Probe microscope to inspect both sides of every connection being used (OTDR Port, Launch Cable, bulkhead connectors, patch cords, etc.)
- Focus the fiber on the screen. If dirty, clean the connector.
- If it appears clean, run inspection test.
- If it fails, clean the fiber and re-run inspection test. Repeat until it passes.

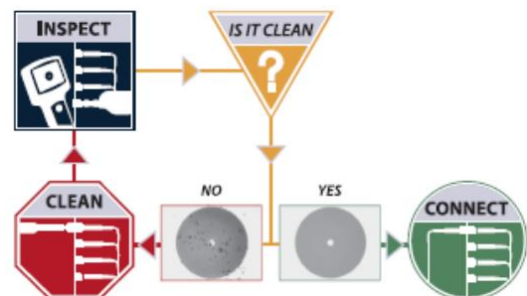





Figure 2: Inspect Before You Connect (IBYC)

Connect Launch Cable to the OTDR port:

1. Inspect the OTDR port on top of the ONA-800.
2. Inspect the fiber end face of Launch Cable.
3. Connect Launch Cable to the OTDR port.

Launch and Configure Smart Test:

1. Press the Power button  to start the test set.
2. Press the **Home** button  to display the Home view. Select the  **Tests** icon and tap **Fiber module #1** to activate the OTDR module.

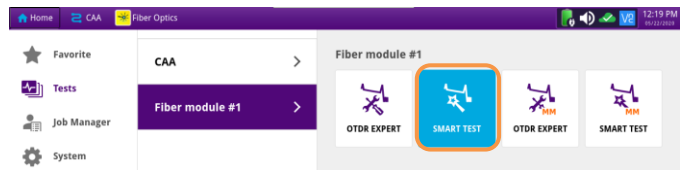




Figure 3: Test screen

3. Tap the  icon.
4. Select a configuration file:
 - Select the **EXPRESS** configuration file to setup the T-BERD for 5 second acquisitions to quickly confirm loss and distance.
 - Select the **CERTIFICATION** configuration file to setup for 20 second acquisitions to confirm loss and distance AND analyze all events (slices, connectors, etc.)
 - Tap  to select a user configuration file stored in the /disk/fiber/config folder.

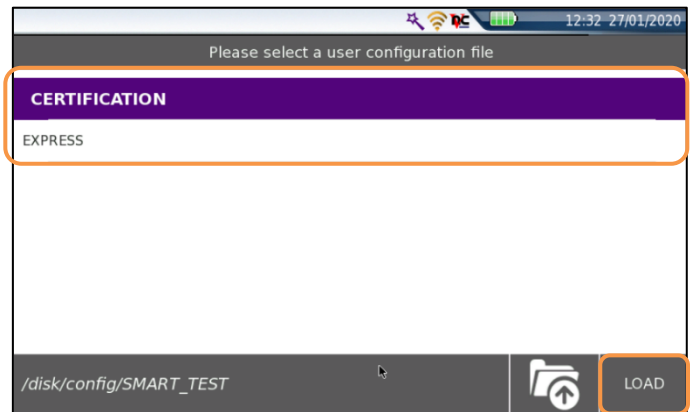





Figure 4: SMART TEST Configuration File

5. Tap **LOAD** to view the **SMART TEST Setup** screen.
6. **Laser:** Tap the desired wavelength(s) to test. Select 2 wavelengths to detect bends.
7. **Distance Unit:** Tap the desired unit of measure for the launch cable.
8. **Launch Cable:**
 - a. Tap **YES** if you are using a Launch Cable.
 - b. Tap the  icon to enter or measure the **Launch Cable** length.
 - c. If the launch cable length is known, tap  to clear existing text, enter new value on the keypad and tap  to return.
 - d. To measure the launch cable length, tap **Measure** and tap **Confirm**. The measured value will auto-populate when measurement is finished.

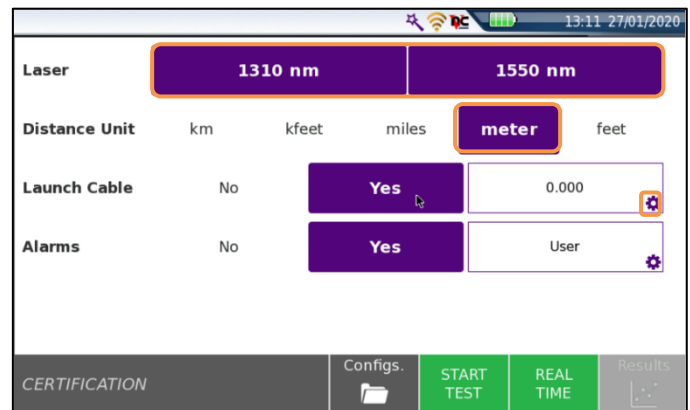


Figure 5: SMART TEST Setup

Note: The Launch Cable should not be connected to the Fiber Under Test during measurement.

9. **Alarms:** Choose **User** for Viavi recommended Pass/Fail limits.
10. **Distance Unit:** If you wish to use a different unit of measure for the test results, change the unit of measure to the desired value.

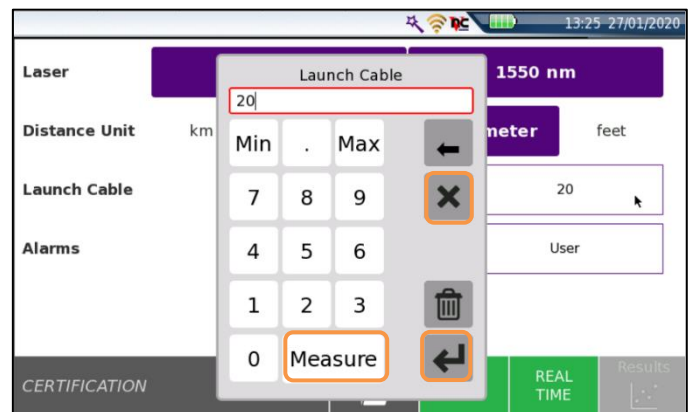


Figure 6: Launch Cable Setup

Connect to Fiber Under Test (FUT):

The Launch Cable may be connected to the FUT via an optical patch panel (OPP) or an optical coupler:

1. If the interface to the FUT is a patch cord, connect the patch cord to an optical coupler with the same connector type.
2. Inspect the FUT connected to the coupler or OPP.
3. Inspect the other fiber end face of the Launch Cable.
4. Connect the Launch Cable to the coupler or OPP.

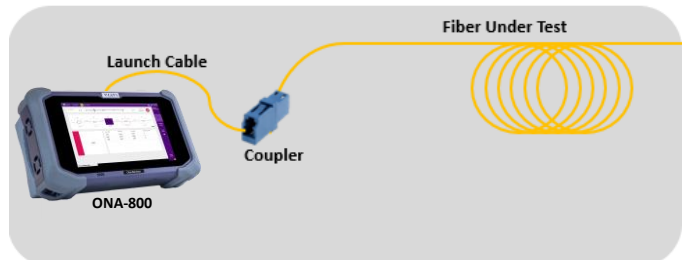


Figure 7: Connecting the Launch Cable to the FUT with a coupler

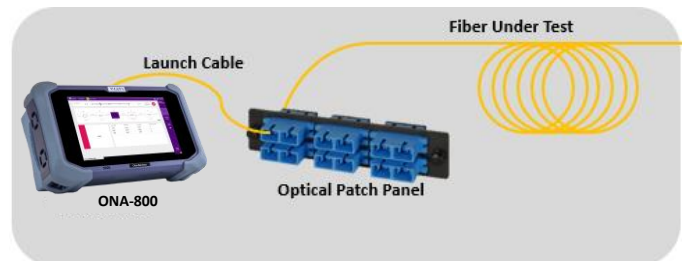



Figure 8: Connecting the Launch Cable to an OPP

Run Test:

1. Tap  to start the test. After auto-configuration, the OTDR will perform a connection check to ensure that the connection is **Good**. If the Connection is **Bad**, disconnect the launch cable, repeat steps 1 through 3 on page 1, and repeat steps 1 through 4 above on page 3, ensuring all fiber end faces are clean.
2. The T-BERD/MTS will perform acquisitions at the configured wavelengths. Overall test results (Pass or Fail) will be displayed in a pop-up window. Tap the window to close it.

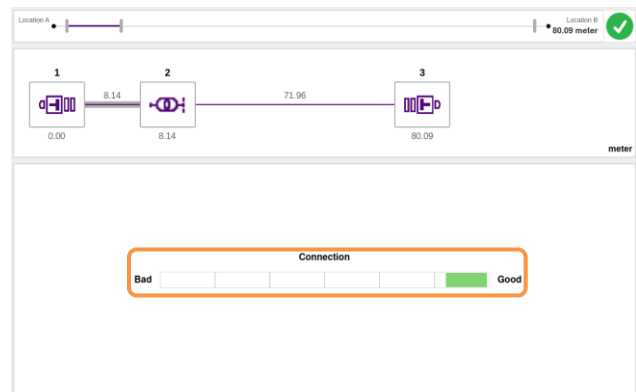






Figure 9: Connection Check

- **SmartLink view:** The FUT is displayed as a series of icons representing each event (connector, splice, bend, etc.). The center of the display (Link Table) shows summary results for the entire span. Acquisitions for which all events are acceptable are marked with a green check . Acquisitions with events that exceed pass/fail thresholds for loss or reflectance are marked with a red . The lower display (Alarms) shows each event that exceeds thresholds. Softkeys can be used to alter the display:

-  Tap any icon in the upper display to show detailed results for the event.

-  Detailed results are shown for all events.

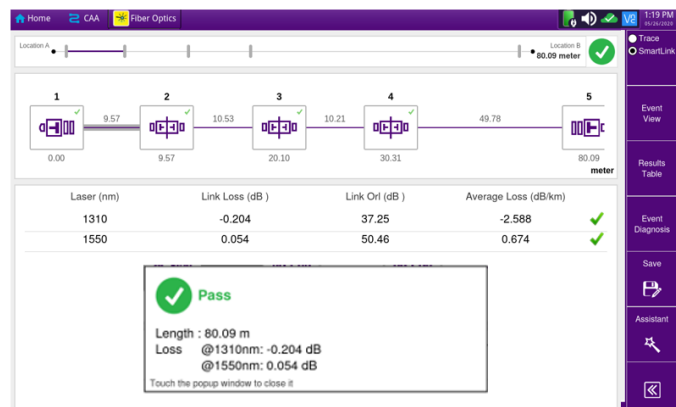








Figure 10: SmartLink View

3. Tap the **Save** softkey  to view File **Recording Information**.
4. Enter Fiber Id, Fiber Number, Locations, and Job ID as follows:
 - Tap field to open keyboard
 - Tap  to clear existing text.
 - Enter desired value.
 - Tap  icon to return.

Note: The Job ID field identifies the Job ID and creates a folder to save the result by the same name. The default save location is **JOB** folder under **disk**.

5. Tap  to save the trace in **.sor** format.
- Tap  to save the trace in **.sor** and **.pdf** format. One file is saved per wavelength.

6. The ONA-800 will return to the OTDR results screen.

7. Tap the **Assistant** soft key  to return to the **SMART TEST** Setup menu.
8. Repeat all steps on pages 3 and 4 for all Fibers under test.

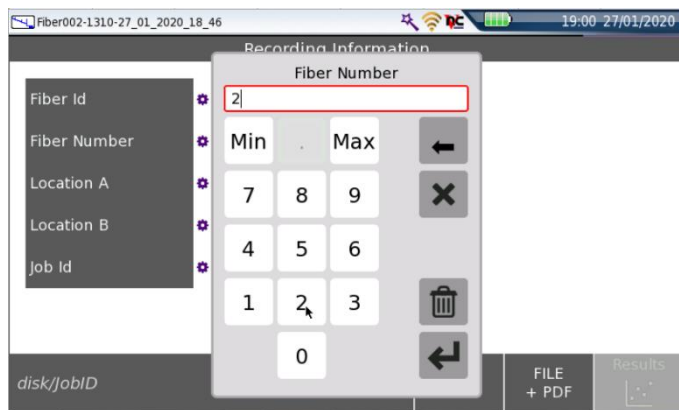


Figure 11: Recording Information

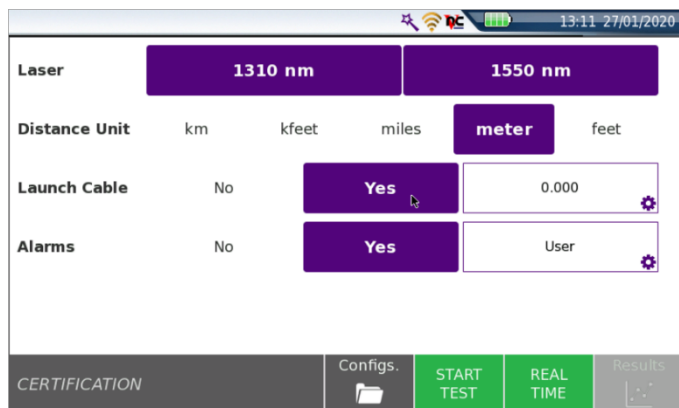


Figure 12: SMART TEST Setup